

## 8. Inhibitor Switch

### A: REMOVAL


- 1) Disconnect ground cable from battery.
- 2) Disconnect connector from inhibitor switch, and then remove the switch. <Ref. to 4AT-51, REMOVAL, Inhibitor Switch.>

### B: INSTALLATION

Installation is in the reverse order of removal.

### C: INSPECTION

Measure inhibitor switch resistance.

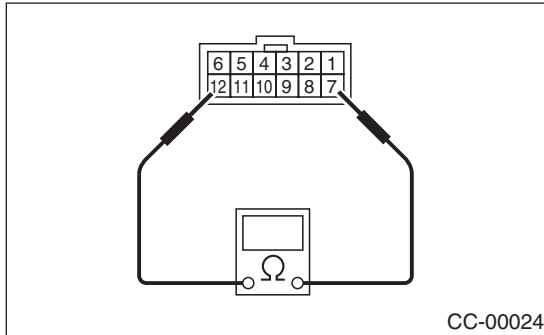

Selector lever position	Terminal No.	Standard
P	7 and 12	Less than 1 Ω
N		Less than 1 Ω
Except P and N		More than 1 MΩ

If NG, replace inhibitor switch.

# INHIBITOR SWITCH

CRUISE CONTROL SYSTEM

---

**MEMO:**