


7. Rear Speaker

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 3) Remove rear speaker mounting screws.

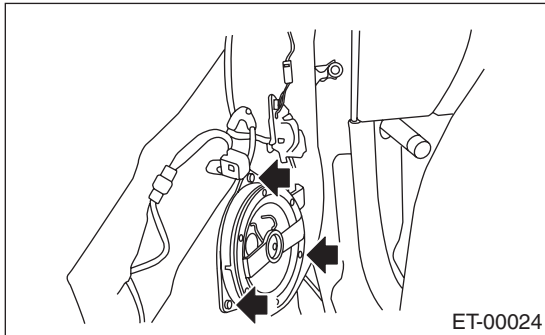

- 4) Disconnect harness connector and remove rear speaker.

B: INSTALLATION

Install in the reverse order of removal.