

## 8. Antenna


### A: REMOVAL

#### 1. PILLAR ANTENNA


- 1) Remove the antenna plug located at the foot of the driver's seat.
- 2) Remove the mounting screws and detach the antenna.

#### 2. ROOF ANTENNA

- 1) Remove the roof trim.  
<Ref. to EI-44, REMOVAL, Roof Trim.>
- 2) Disconnect the harness connector, and remove the nut (A).

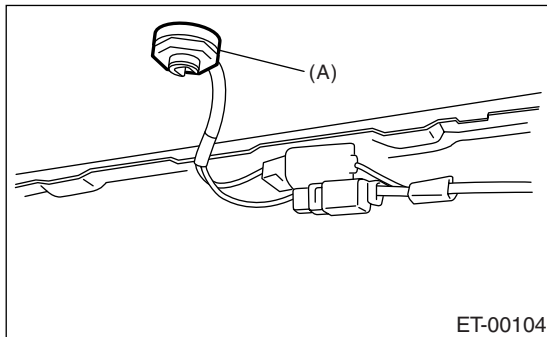

- 3) Pull the antenna out from roof.

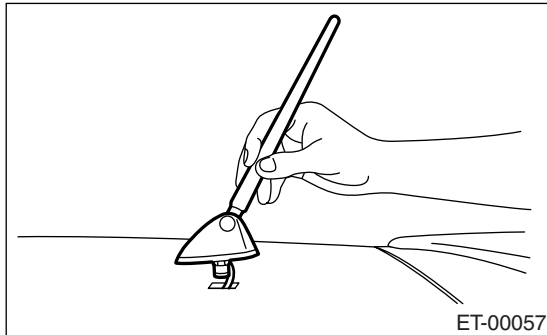

### B: INSTALLATION

Install in the reverse order of removal.