

## FRONT ACCESSORY POWER SOCKET


ENTERTAINMENT

---

### 9. Front Accessory Power Socket

#### A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove center panel. <Ref. to ET-5, REMOVAL, Radio.>
- 3) Disconnect harness connectors and remove front accessory power socket.

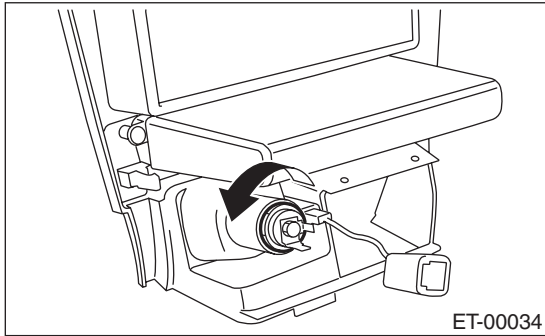

#### B: INSTALLATION

Install in the reverse order of removal.