


SWITCH BACK GATE

EXTERIOR BODY PANELS

9. Switch Back Gate


A: REMOVAL

- 1) Pull up rear seat cushion, put down rear seat backrest.
- 2) Remove floor trim panel.

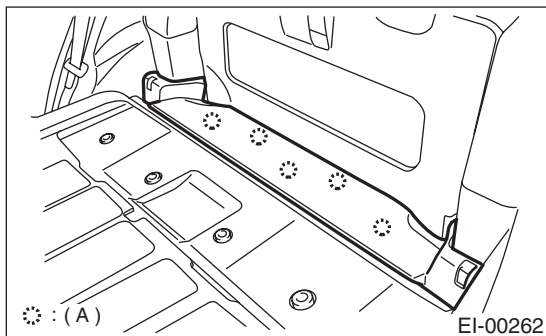

(A) Clip

- 3) Remove bolts, and detach switch back gate.

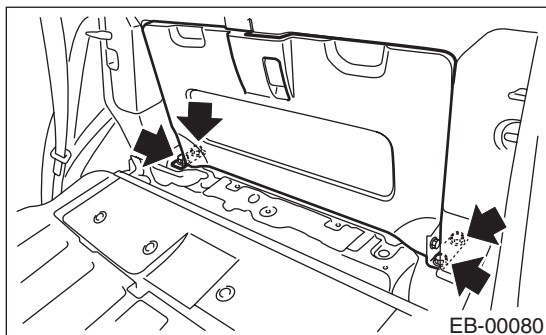


- 4) Remove weatherstrip.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:


Mount weatherstrip by aligning silver line mark with back panel tray center bolt.

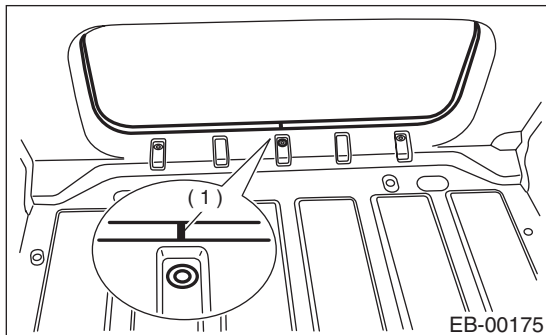

(1) White line mark


C: DISASSEMBLY

- 1) Remove switch back gate. <Ref. to EB-18, REMOVAL, Switch Back Gate.>
- 2) Remove switch back gate inner cover.

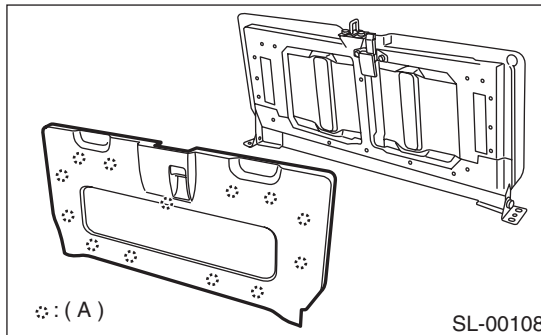

(A) Clip

- 3) Remove switch back gate handle and striker.

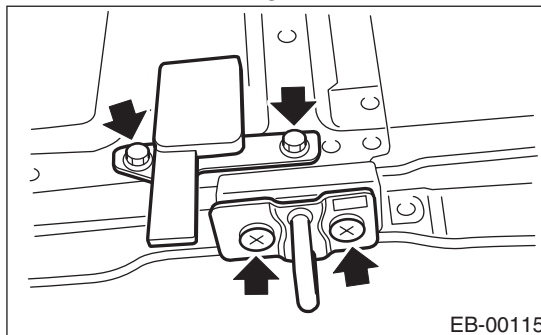


Tightening torque:
27.5 N·m (2.80 kgf·m, 20.3 ft·lb)

D: ASSEMBLY

Install in the reverse order of removal.

NOTE:

- Install striker with marked portion facing vehicle front.

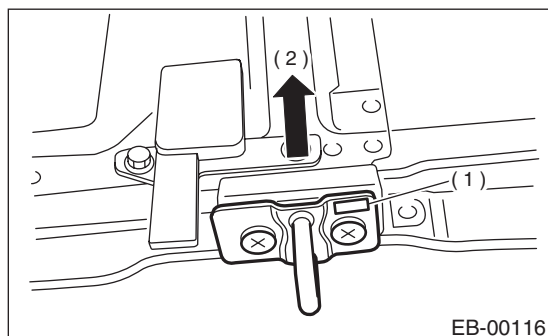

- (1) Marking
- (2) Vehicle front

- There are left/right indicating marks on the switch back gate hinge. When installing, do not mistake the direction.

	Marking
RH	65R
LH	65L

Tightening torque:

Release lever:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

Striker:

18 N·m (1.8 kgf-m, 13 ft-lb)

SWITCH BACK GATE

EXTERIOR BODY PANELS

MEMO: