


CROSSBAR

EXTERIOR/INTERIOR TRIM

10. Crossbar

A: REMOVAL

- 1) Remove TORX® bolt T30 from each cross end support.
- 2) Rotate lower clamp of each end support about 90 degrees downward to remove crossbar.

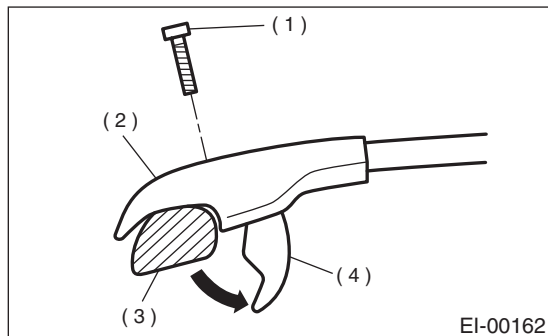

- (1) TORX® bolt T30
- (2) End support
- (3) Roof rail
- (4) Lower clamp

CAUTION:


Do not damage roof panel during removal or installation.

B: INSTALLATION

- 1) Rotate lower clamp of each end support about 90 degrees downward.
- 2) Set crossbar so that front direction arrow on the right top face of crossbar points in the direction of vehicle front, and place crossbar end support at position 152.4 mm (6.00 in) back from joint of front roof rail support and roof rail.

Length A:

152.4 mm (6.00 in)

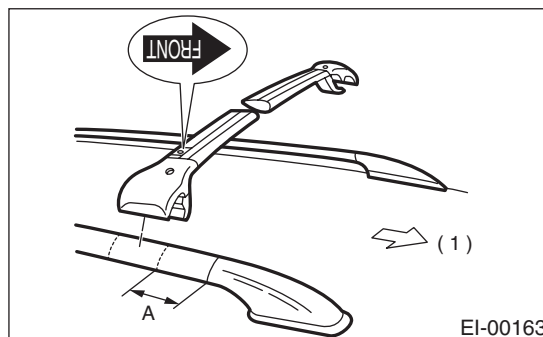


- (1) Front of vehicle

- 3) Set crossbar so that front direction arrow on the right top face of crossbar points in the direction of vehicle front, and place crossbar end support at position 152.4 mm (6.00 in) back from joint of rear roof rail support and roof rail.

Length B:

152.4 mm (6.00 in)

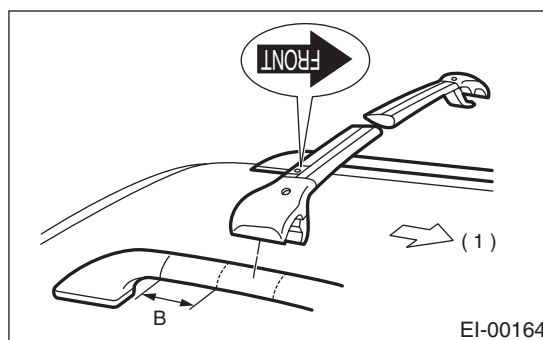

- (1) Front of vehicle

- 4) Tighten end support and lower clamp using TORX® bolt T30.