


CONSOLE BOX

EXTERIOR/INTERIOR TRIM


16. Console Box

A: REMOVAL


1) Remove shift knob (A) (MT model) and front cover (B).

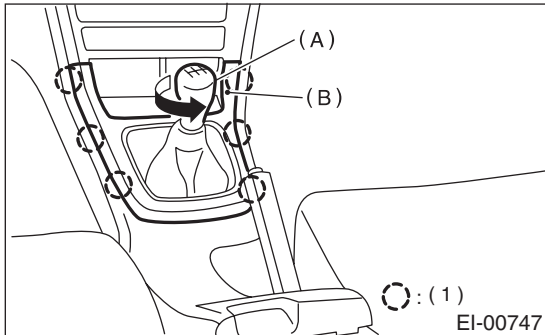

2) Remove tray (A) and console cover (B).

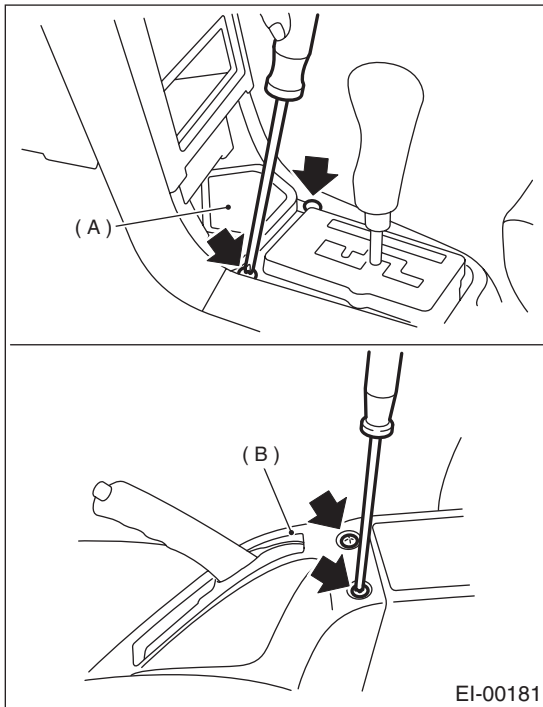

3) Remove console box (A).

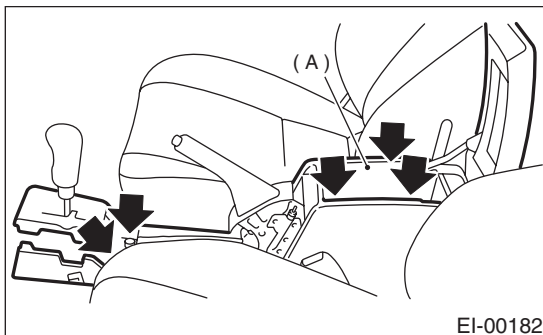

B: INSTALLATION

Install in the reverse order of removal.