


18.Upper Inner Trim

A: REMOVAL

- 1) Remove front mole (A).
- 2) Remove front pillar upper trim (B).
- 3) Detach front seat belt shoulder anchor, then remove center pillar upper trim (C).

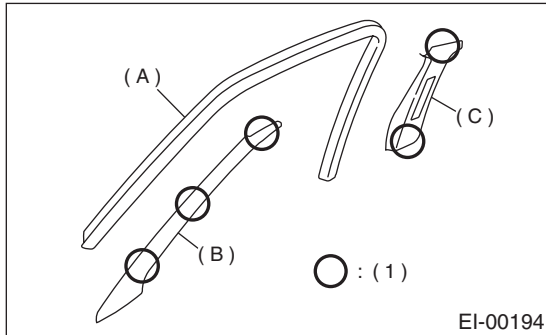

- (1) Hook pawl

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of inner trim panel to body flange.

NOTE:

When installing center pillar upper trim and front pillar upper trim, be sure to set front mole as shown in figure.

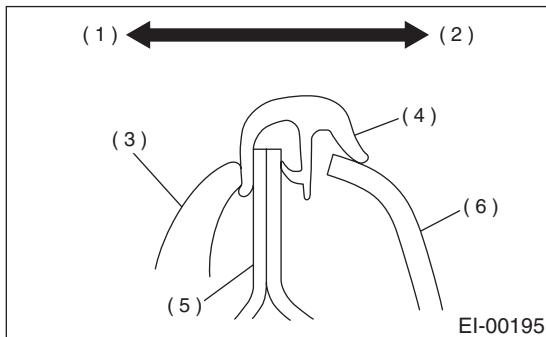

- (1) Outside
- (2) Inside
- (3) Weatherstrip
- (4) Mole
- (5) Body
- (6) Trim