


## 2. Front Grille

### A: REMOVAL

- 1) Open hood.
- 2) Remove bolts and nuts to remove front grill.

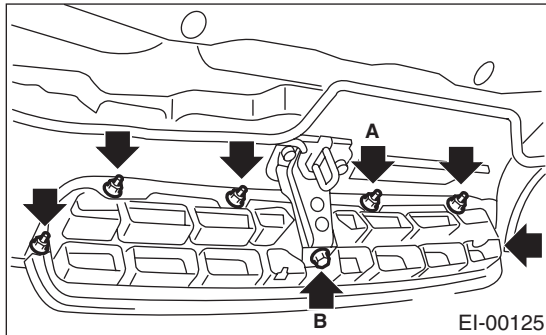

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

- A:  $4.4 \pm 1.5$  N·m ( $0.4 \pm 0.1$  kgf·m,  $3.2 \pm 1.0$  ft·lb)**
- B:  $7.0 \pm 2.0$  N·m ( $0.7 \pm 0.2$  kgf·m,  $5.1 \pm 1.4$  ft·lb)**