



35.Hard Bed Cover

A: REMOVAL

1) Remove two mounting bolts to remove the bed cover.

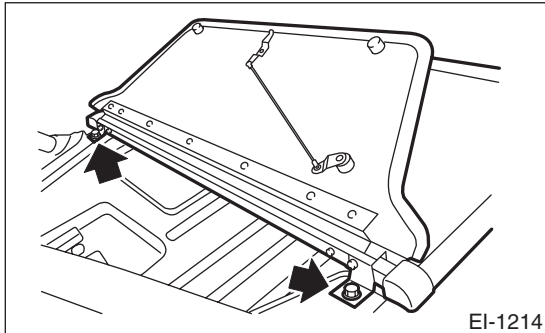


2) Remove the front striker, clips and bolts to remove the front cover.

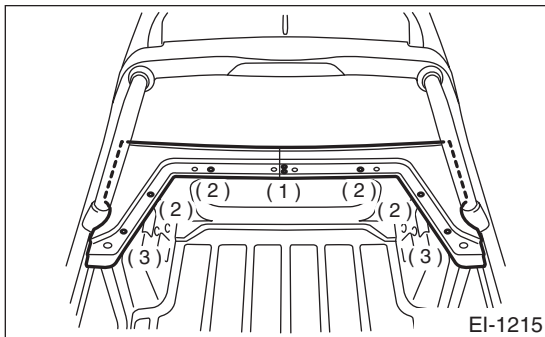


- (1) Front striker
- (2) Clip
- (3) Bolt


3) Remove bolts and nuts to remove the crossbar.

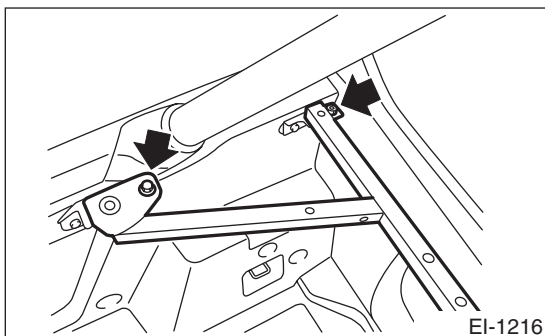


4) Remove the front bracket.

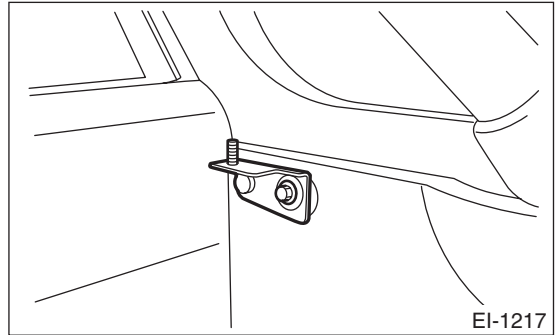

5) Remove the rear bracket.

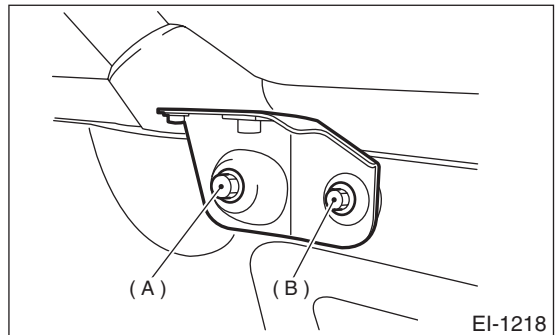

6) Check the aligning positions of the rear bracket mounting bolt (A) hole and the guard pipe lower bracket hole.

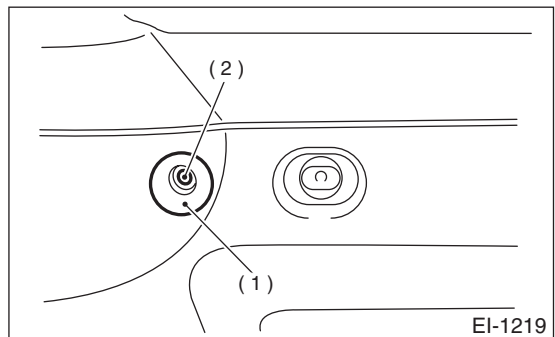

- (1) Guard pipe lower bracket
- (2) Bolt (A) hole


7) If the guard pipe lower bracket hole is not aligned with the bolt (A) hole, adjust the hole position with the following procedure.

- (1) Remove the cargo bed side tray. <Ref. to EI-46, REMOVAL, Cargo Bed Side Tray.>

HARD BED COVER

EXTERIOR/INTERIOR TRIM

- (2) Loosen two guard pipe lower bracket mounting bolts.

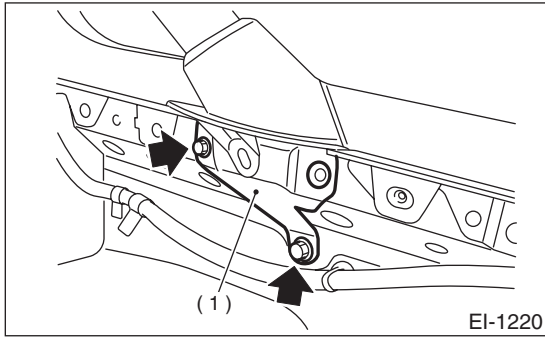

(1) Guard pipe lower bracket

- (3) Align the bolt (A) hole with the guard pipe lower bracket hole to tighten two bolts to the specified torque.

Tightening torque:

70 N·m (7.1 kgf·m, 52 ft·lb)


- (4) Install the cargo bed side tray.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.53 ft·lb)

- 8) Remove the tail gate tray. <Ref. to EI-56, REMOVAL, Tail Gate Tray.>


- 9) Remove the rear striker.

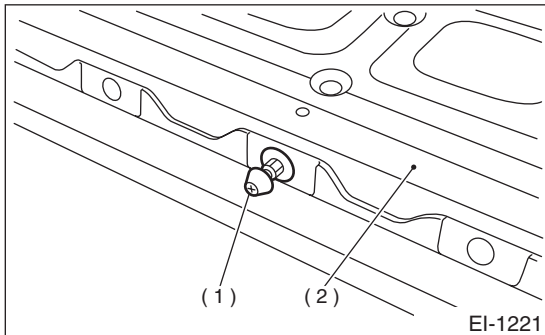

(1) Rear striker
(2) Tail gate

B: INSTALLATION

- 1) Adjust the front striker and the rear striker to the specified values.

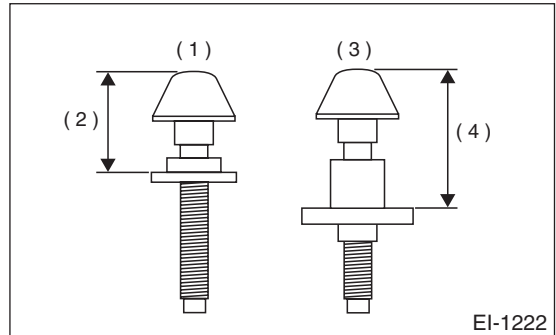


(1) Front striker
(2) 21 mm (0.83 in)
(3) Rear striker
(4) 28.5 mm (1.122)

- 2) Install the rear striker to the tail gate.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.53 ft·lb)

- 3) Install the rear bracket.

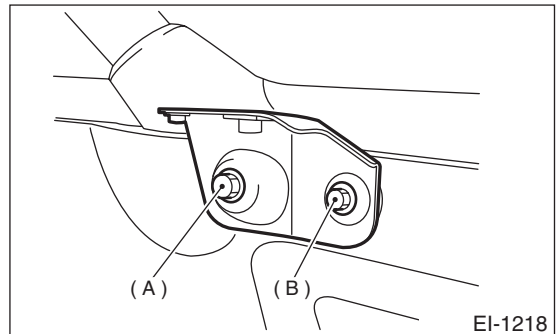

Tightening torque:

Bolt (A):

70 N·m (7.1 kgf·m, 52 ft·lb)

Bolt (B):

7.5 N·m (0.76 kgf·m, 5.53 ft·lb)

- 4) Install the front bracket.

Tightening torque:


7.5 N·m (0.76 kgf·m, 5.53 ft·lb)

- 5) Install the crossbar.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.53 ft·lb)

6) Install the front cover.

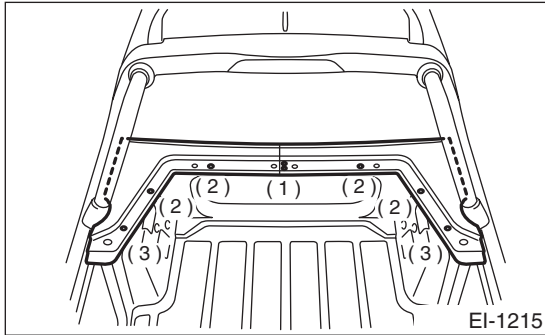

- (1) Front striker
- (2) Clip
- (3) Bolt

Tightening torque:

7.5 N-m (0.76 kgf-m, 5.53 ft-lb)

7) Install the bed cover.

Tightening torque:

70 N-m (7.1 kgf-m, 52 ft-lb)

8) Make sure that the bed cover can be securely locked and unlocked with the key. Adjust the front and rear striker by changing their heights.

9) Install the tail gate tray.

Tightening torque:

7.5 N-m (0.76 kgf-m, 5.53 ft-lb)

HARD BED COVER

EXTERIOR/INTERIOR TRIM

MEMO: