



9. Cowl Panel

A: REMOVAL

- 1) Open hood.
- 2) Remove wiper arm. <Ref. to WW-10, REMOVAL, Front Wiper Arm.>
- 3) Remove front panel seal.

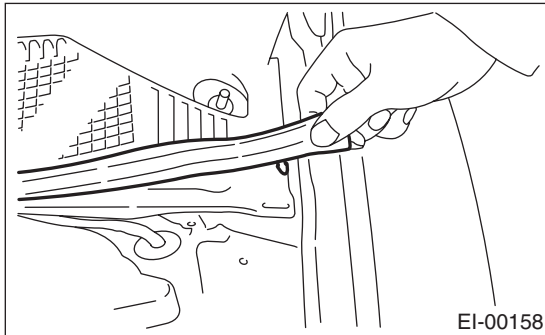

- 4) Remove clips (A) and cowl side panel (C). Loosen clips (D) on six positions, and remove cowl side panel (B).

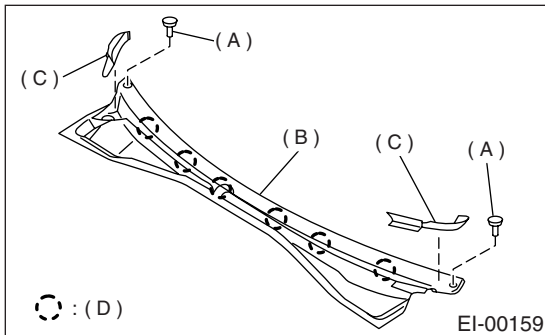

B: INSTALLATION

Install in the reverse order of removal.