REAR WINDOW DEFOGGER SWITCH

GLASS/WINDOWS/MIRRORS

15.Rear Window Defogger Switch

A: REMOVAL

<Ref. to AC-28, REMOVAL, Control Unit.>

B: INSTALLATION

<Ref. to AC-28, INSTALLATION, Control Unit.>

C: INSPECTION

Check continuity between connectors at the back of heater control unit.

Switch position	Terminal No.	Standard
OFF		More than 1 M Ω
OFF	(i17) 14 and (i17) 10	Less than 1 Ω