


# OUTER MIRROR ASSEMBLY

GLASS/WINDOWS/MIRRORS


## 17. Outer Mirror Assembly

### A: REMOVAL

- 1) Remove door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 2) Pull off sealing cover to disconnect outer mirror harness connector.

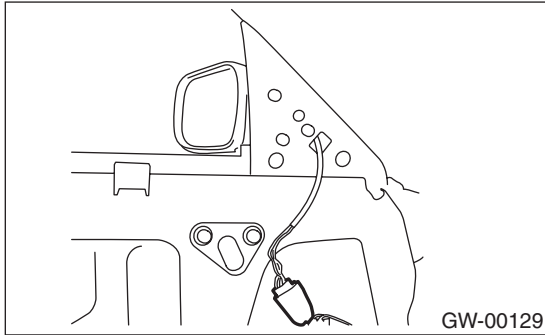

- 3) Remove screws to remove outer mirror assembly.

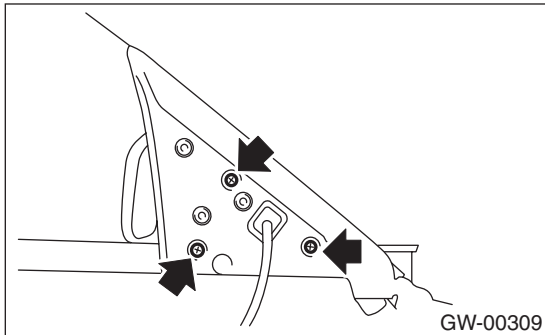

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Check to ensure that outer mirror moves properly when battery voltage is applied to outer mirror harness connector terminals.

Switch position	Terminal No.
OFF	—
UP	1 (+) and 3 (-)
DOWN	3 (+) and 1 (-)
LEFT	2 (+) and 3 (-)
RIGHT	3 (+) and 2 (-)

If defective, replace the outer mirror.