


RELAY AND FUSE

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

17. Relay and Fuse

A: LOCATION

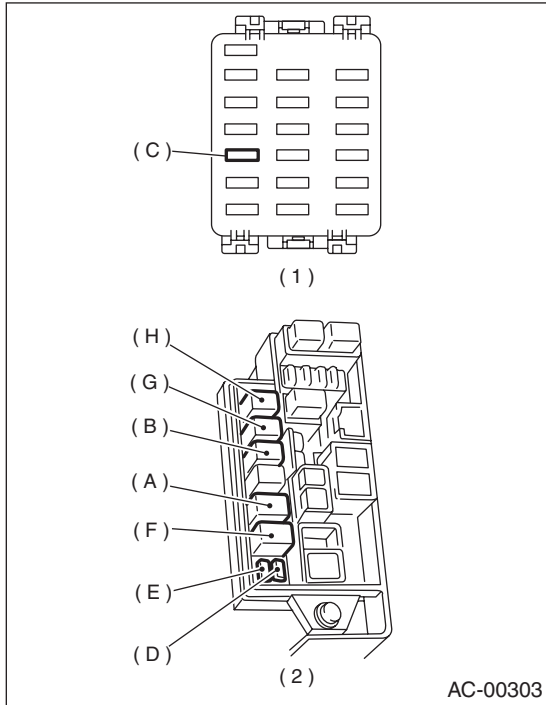

- (1) Joint box
- (2) Main fuse box


	Non-TURBO model	TURBO model
Main fan relay	F	F
Sub fan relay	B	B
Fan mode relay	—	H
A/C relay	A	A
A/C fuse	C	C
Main fan fuse	E (20 A)	E (30 A)
Sub fan fuse	D (20 A)	D (30 A)

RELAY AND FUSE

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

B: INSPECTION

1. 4-TERMINAL TYPE

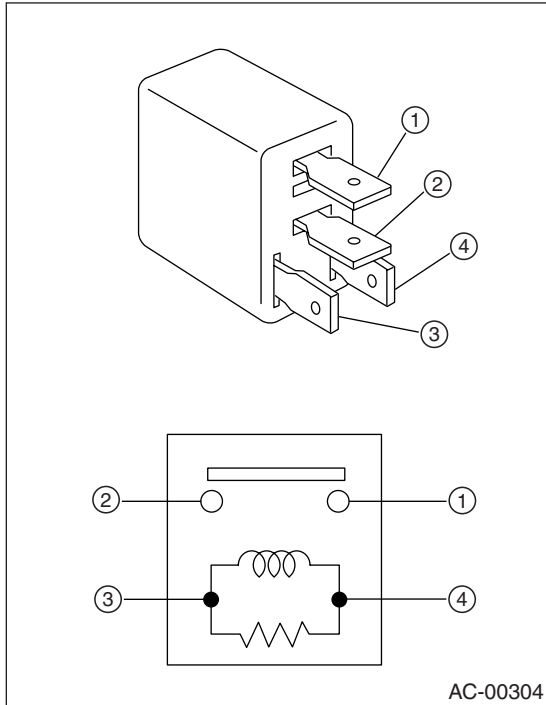


(3) — (4): Continuity exists.

(1) — (2): No continuity

While applying battery voltage to the terminal between (3) and (4), check continuity between (1) and (2).

If no continuity exists, replace the relay with a new one.

2. 5-TERMINAL TYPE

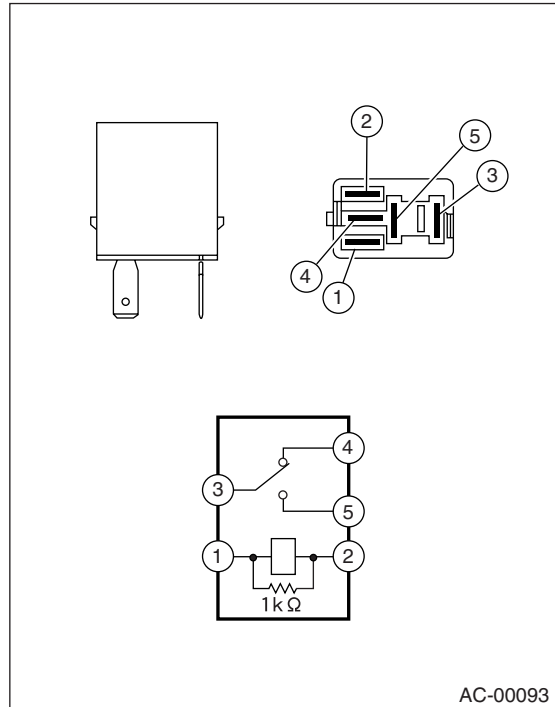

(1) — (2): Continuity exists.

(3) — (4): Continuity exists.

(3) — (5): No continuity

While applying battery voltage to the terminal between (1) and (2), check continuity between (3) and (5).

If no continuity exists, replace the relay with a new one.