


HEATER DUCT

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

21.Heater Duct

A: REMOVAL

- 1) Remove heater unit. <Ref. to AC-24, REMOVAL, Heater Unit.>
- 2) Remove front seat. <Ref. to SE-6, REMOVAL, Front Seat.>
- 3) Remove front side sill cover.
- 4) Pull off floor mat to remove heater duct.

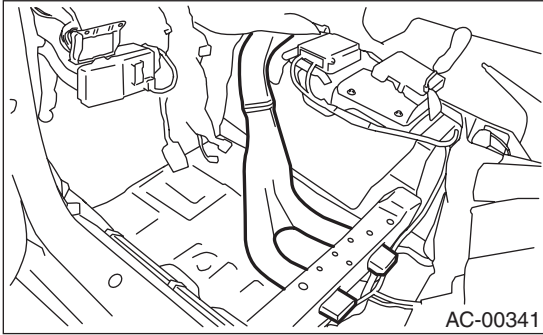

B: INSTALLATION

Install in the reverse order of removal.