


HEATER VENT DUCT

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

22.Heater Vent Duct

A: REMOVAL

- 1) Remove instrument panel. <Ref. to EI-37, REMOVAL, Instrument Panel Assembly.>
- 2) Remove 9 screws.
- 3) Remove heater vent duct.

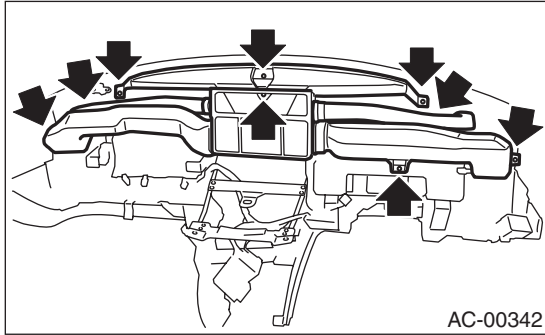

B: INSTALLATION

Install in the reverse order of removal.