


HEATER BLOWER RESISTOR

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

9. Heater Blower Resistor

A: REMOVAL

- 1) Remove glove box. <Ref. to EI-34, REMOVAL, Glove Box.>
- 2) Disconnect blower resistor connector.
- 3) Loosen 2 screws to remove blower resistor.

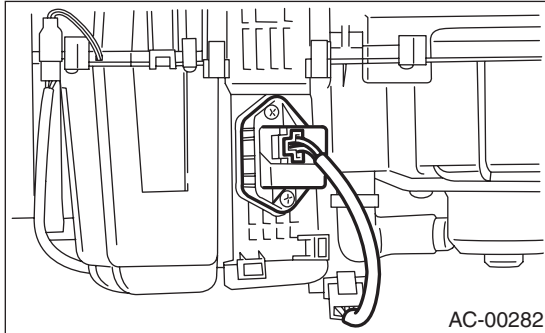


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. MANUAL A/C

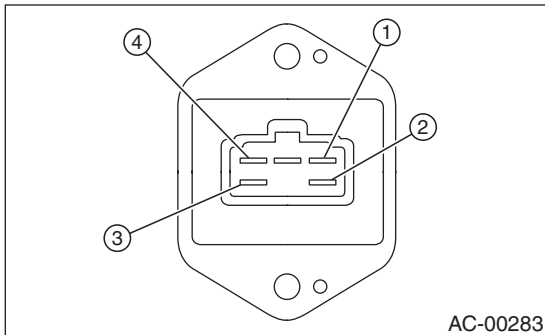

Measure switch resistance.

Terminal No.	Condition	Standard
4 and 3	Constant	Approx. 0.46 Ω
3 and 2	Constant	Approx. 0.85 Ω
2 and 1	Constant	Approx. 1.77 Ω

If NG, replace the blower resistor.