

14. Front Fog Light Bulb

A: REMOVAL

- 1) Remove fog light assembly. <Ref. to LI-17, REMOVAL, Front Fog Light Assembly.>
- 2) Disconnect harness connector.
- 3) Turn the bulb assembly counterclockwise, and then remove the bulb.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-3, PRECAUTIONS, General Description.>
- 3) If NG, replace the bulb with a new one.