

16.Rear Finisher Light Assembly

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove tail gate tray. <Ref. to El-56, REMOV-AL, Tail Gate Tray.>
- 3) Remove tail gate cover.

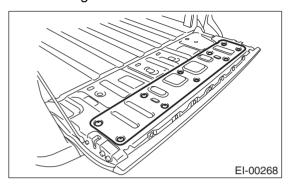

4) Separate connector. Remove nuts and detach rear finisher light.

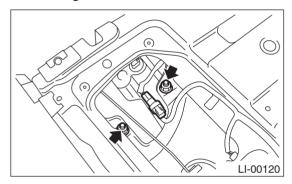

B: INSTALLATION

Install in the reverse order of removal.