


19.Rear Turn Signal Light Bulb

A: REMOVAL

- 1) Remove combination light assembly. <Ref. to LI-19, REMOVAL, Rear Combination Light Assembly.>
- 2) Turn the socket and remove the bulb.

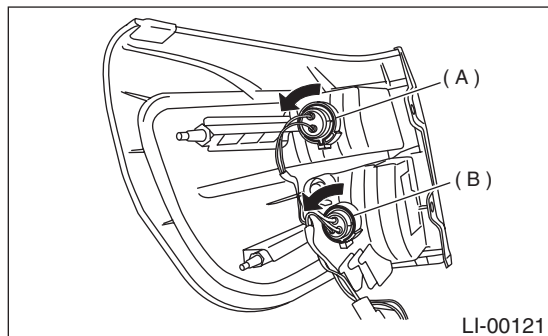

- (A) Back-up light bulb
(B) Brake / Tail / Rear / Turn signal light bulb

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If the requirement is not satisfied, replace it with a new one.