



GENERAL DESCRIPTION

SEATS

1. General Description

A: COMPONENT

1. FRONT SEAT

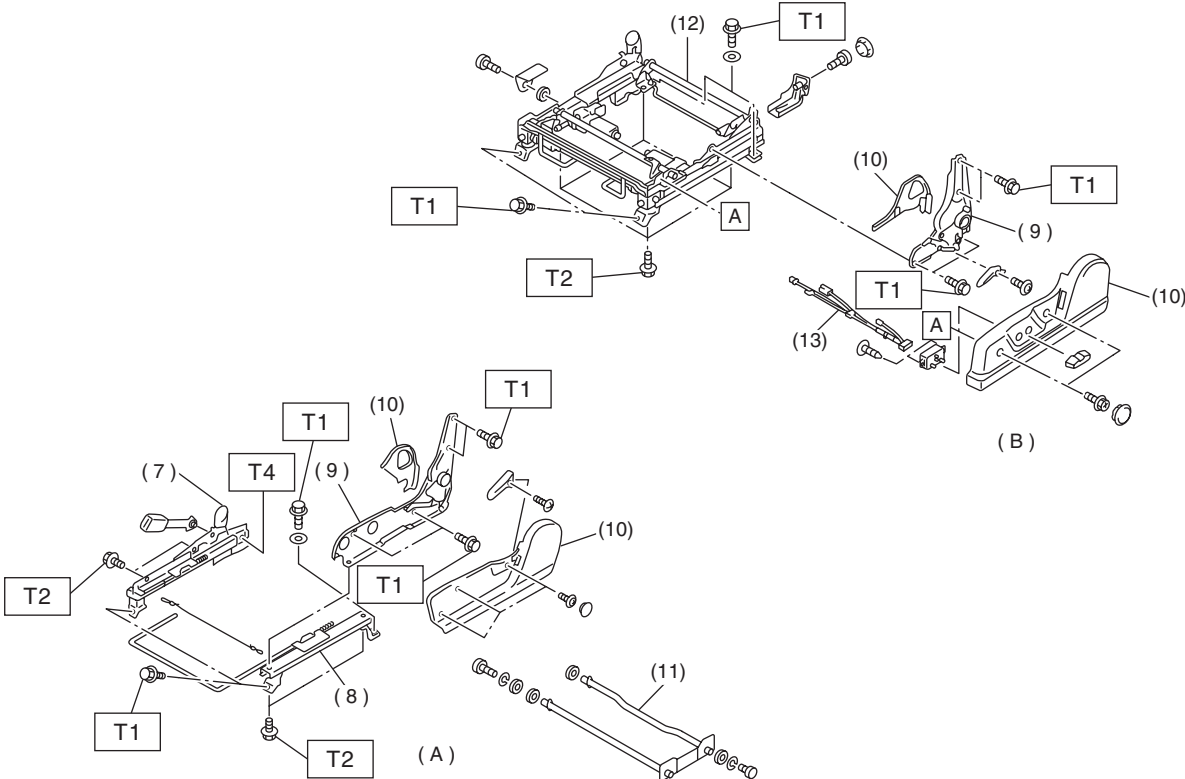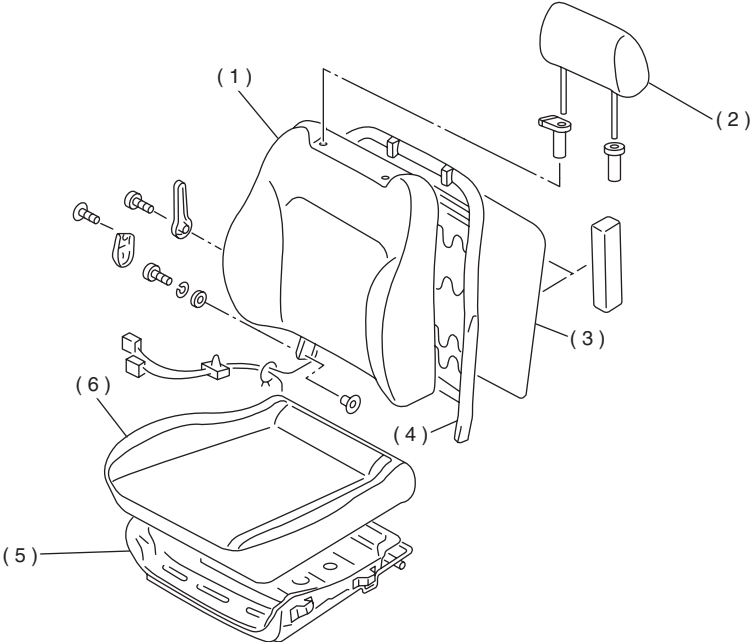

SE-00521

GENERAL DESCRIPTION

SEATS

- | | |
|-----------------------------|--------------------------|
| (1) Seat back pad | (9) Hinge ASSY |
| (2) Headrest | (10) Hinge cover |
| (3) Seat back board | (11) Rod |
| (4) Seat back frame ASSY | (12) Slide and unit ASSY |
| (5) Seat cushion frame ASSY | (13) Power seat harness |
| (6) Seat cushion pad | (A) Standard seat |
| (7) Slide rail inner ASSY | (B) Power seat |
| (8) Slide rail outer ASSY | |

Tightening torque: N-m (kgf-m, ft-lb)

T1: 53 (5.4, 39)

T2: 18 (1.8, 13)


T3: 6 (0.6, 4.3)

T4: 30 (3.1, 22)

GENERAL DESCRIPTION

SEATS

2. REAR SEAT

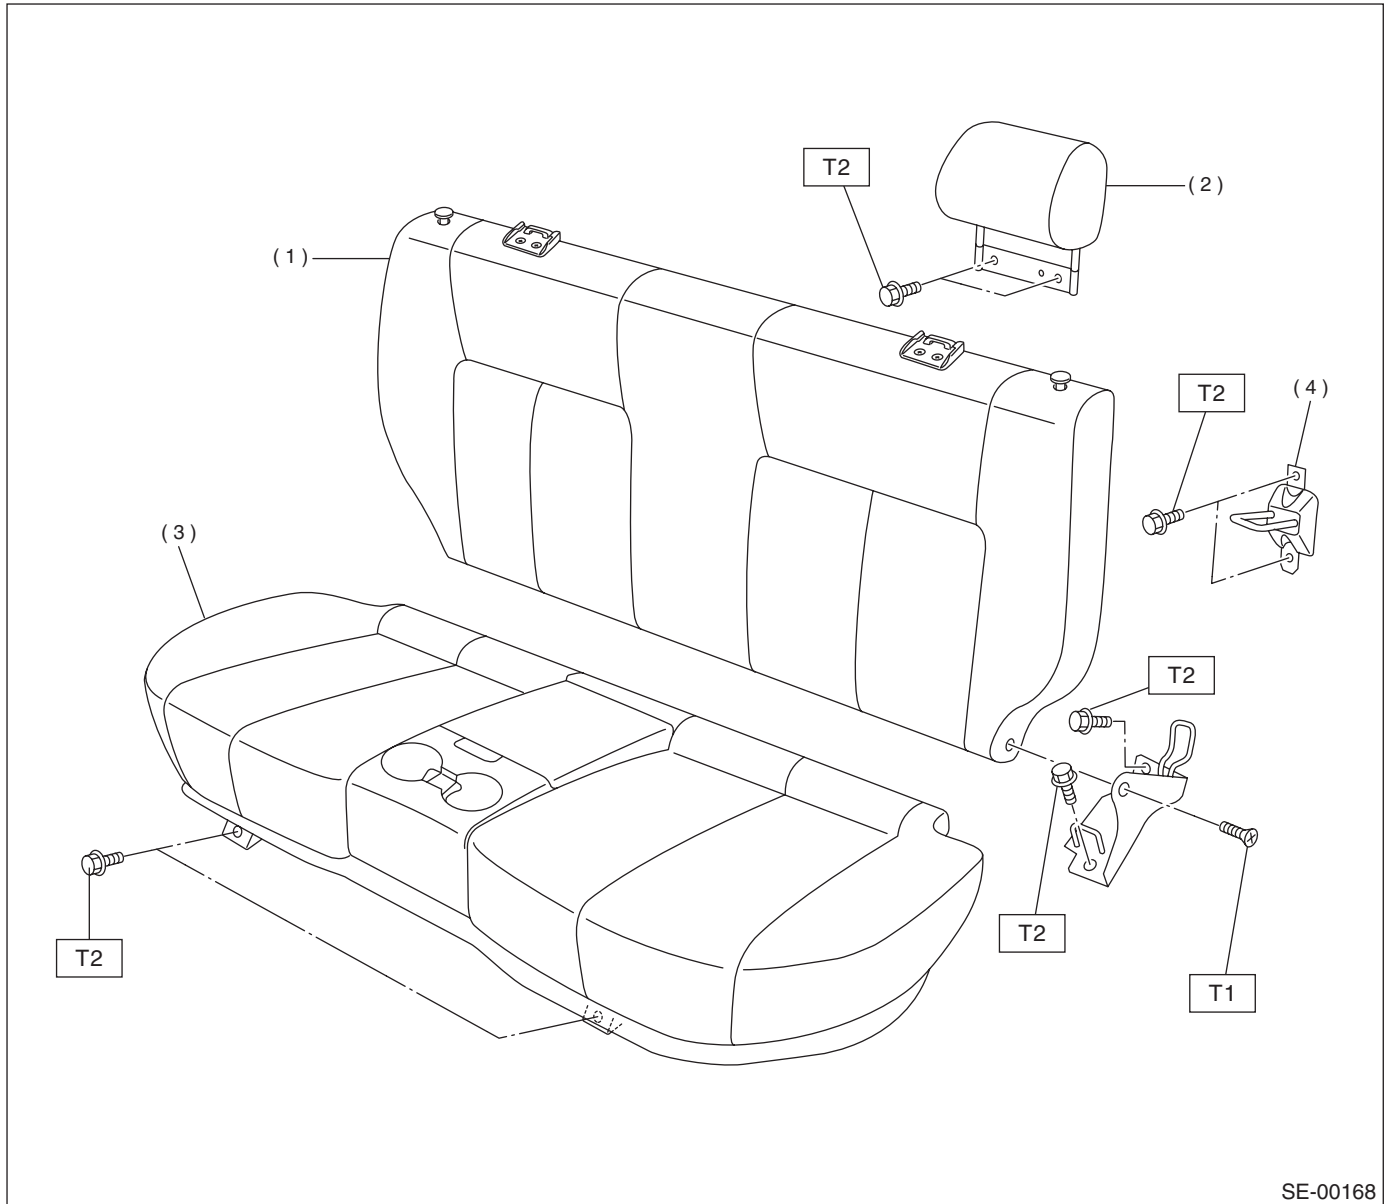

- (1) Backrest
- (2) Headrest

- (3) Cushion
- (4) Striker

Tightening torque: N·m (kgf·m, ft·lb)

T1: 9.8 (1.0, 7.2)

T2: 24.5 (2.5, 18.1)

GENERAL DESCRIPTION

SEATS

B: CAUTION

- Take care not to contaminate or damage seat surface.
- While loading to or unloading to vehicle, take care not to contact body.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Long Nose Pliers	Used for removing and installing hog ring