


## 14. Remote Openers

### A: REMOVAL

#### 1. HOOD OPENER

- 1) Remove the release cable from the hood lock.
- 2) Remove the bolt. Remove the opener lever.

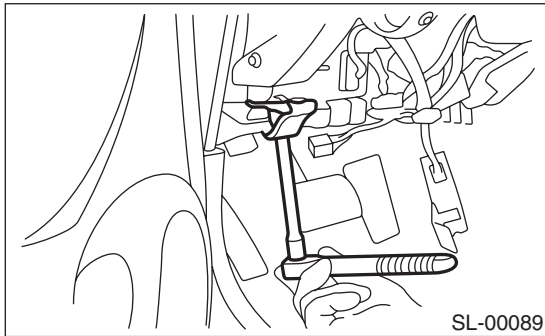

### B: INSTALLATION

#### 1. HOOD OPENER

Install in the reverse order of removal.

### C: INSPECTION

Make sure the hood opens and closes smoothly.