

16.Key Lock Cylinders

A: REPLACEMENT

1. FRONT DOOR

- 1) Remove the front outer handle. <Ref. to SL-33, REMOVAL, Front Outer Handle.>
- 2) Remove the rod clamp. Replace the key cylinder.

