


25. Switch Back Gate Latch

A: REMOVAL

- 1) Remove rear bulk head trim. <Ref. to EI-54, REMOVAL, Rear Bulkhead Trim.>
- 2) Remove connector. Remove bolts and switch back gate latch.

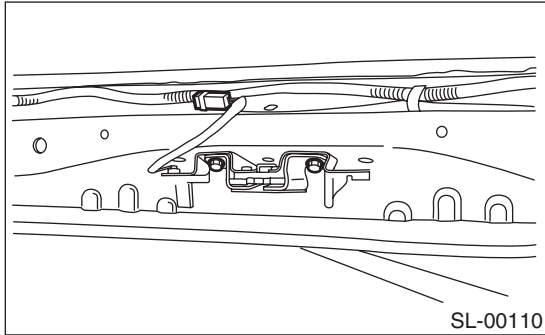

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

27.5 N·m (2.80 kgf·m, 20.3 ft·lb)

NOTE:

After installing, make sure that lock operates smoothly.

C: INSPECTION

Make sure that lever works smoothly.