


8. Front Door Lock Actuator

A: REMOVAL

- 1) Remove the front door latch assembly. <Ref. to SL-34, REMOVAL, Front Door Latch Assembly.>
- 2) Remove the bolt. Remove the front door lock actuator.

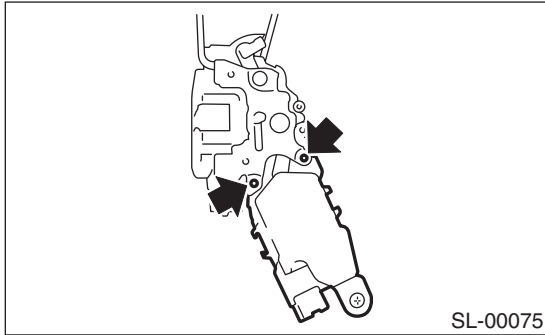

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Make sure the lock works properly after installation.

C: INSPECTION

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to the door lock actuator terminals.

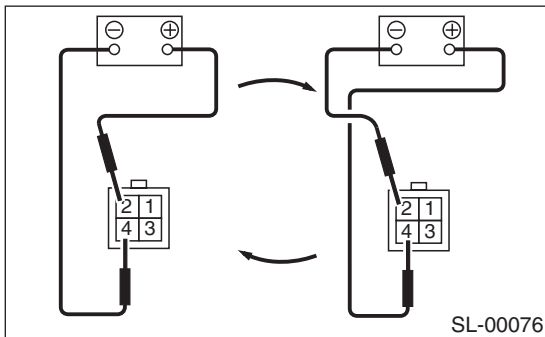

| Terminal No. | Actuator operation |
|-------------------------|--------------------|
| No. 2 (+) and No. 4 (-) | Unlocked → Locked |
| No. 4 (+) and No. 2 (-) | Locked → Unlocked |

If NG, replace the door lock actuator.