
# 1. General Description

## A: COMPONENT

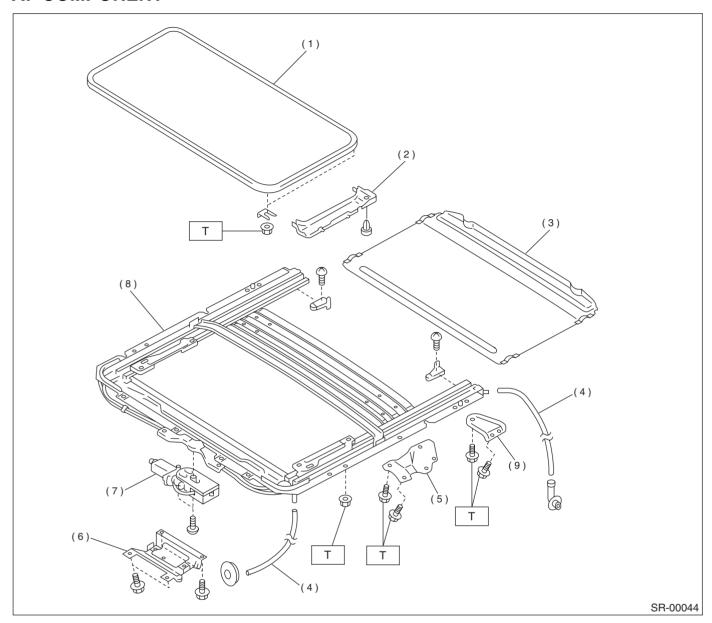

- (1) Glass lid
- (2) Guide rail cover
- (3) Sunshade
- (4) Drain tube
- (5) Sunroof bracket (Front)
- (6) Motor cover
- (7) Motor ASSY
- (8) Frame ASSY
- (9) Sunroof bracket (Rear)

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.4)

### **GENERAL DESCRIPTION**

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

### **B: CAUTION**

- Before disassembling or reassembling parts, always disconnect battery ground cable. When replacing radio, control module, and other parts provided with memory functions, record memory contents before disconnecting the battery ground cable. Otherwise, the memory will be erased.
- Reassemble in reverse order of disassembly, unless otherwise indicated.
- · Adjust parts to the given specifications.
- Connect connectors and hoses securely during reassembly.
- After reassembly, make sure all functional parts operate smoothly.

### C: PREPARATION TOOL

### 1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and volt-
	age.