


5. Washer Tank and Motor

A: REMOVAL

- 1) Open front hood.
- 2) Remove the 2 bolts, hose and connector and then remove the tank.

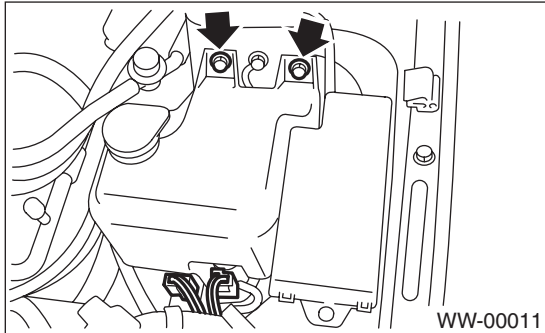

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:

6.0 N·m (0.6 kgf·m, 4.3 ft·lb)

C: DISASSEMBLY

Remove washer motor from tank.

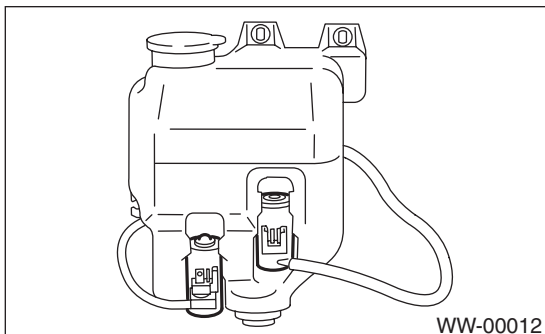

D: ASSEMBLY

- 1) Assemble in the reverse order of disassembly.
- 2) Confirm that water does not leak from installation area of motor.

E: INSPECTION

Apply battery voltage to the connector terminal of the washer motor and make sure the motor operates.

