


# FRONT WIPER MOTOR AND LINK


## 7. Front Wiper Motor and Link

### A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove cowl panel. <Ref. to EI-29, REMOVAL, Cowl Panel.>
- 3) Disconnect connector of motor.
- 4) Remove bolts and nuts to remove wiper link.

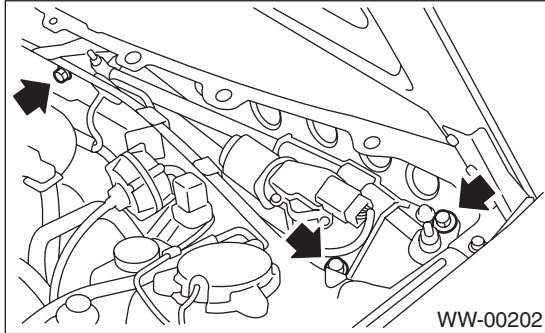

- 5) Remove bolts and nuts to remove motor.

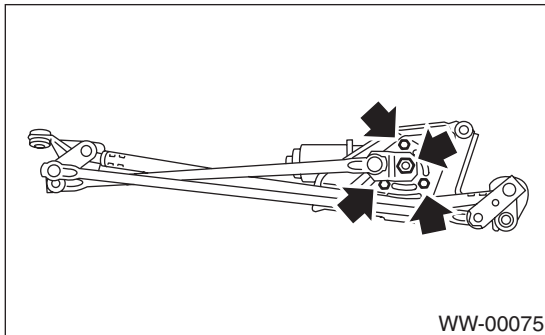

### B: INSTALLATION


Install in the reverse order of removal.

#### Tightening torque:


Refer to **COMPONENT** in **General Description**. <Ref. to WW-2, **FRONT WIPER, COMPONENT, General Description**.>

### C: INSPECTION


- 1) When battery is connected to terminal of connectors, confirm that motor operates at low speed.

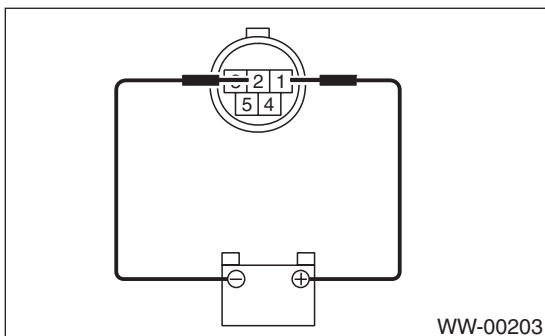

- 2) When battery is connected to terminal of connectors, confirm that motor operates at high speed.

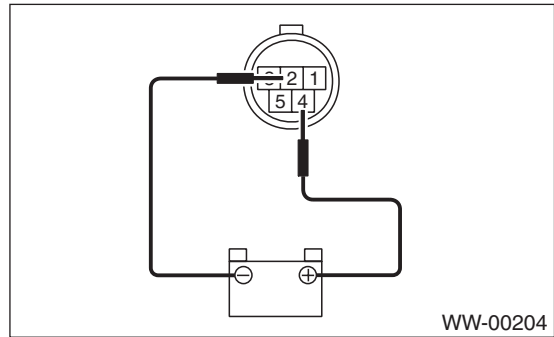

- 3) Connect battery to terminals of connector, and remove terminal connection with motor rotated at low speed, and stop wiper motor through operation.

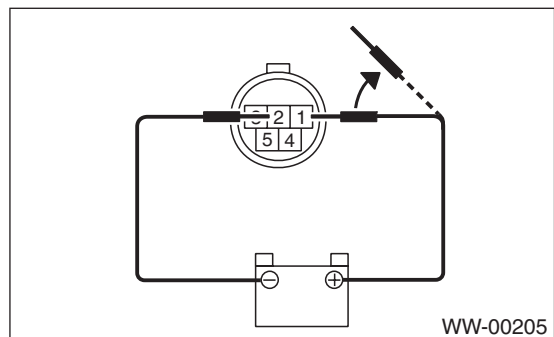

- 4) Connect battery and confirm that motor stops at automatic stop position after motor operates at low speed again.

