

4. Fuel Pump

A: REMOVAL


- 1) Release fuel pressure. <Ref. to 2-2 [W9B0].>
- 2) Remove fuel filler cap.
- 3) Disconnect battery ground cable.

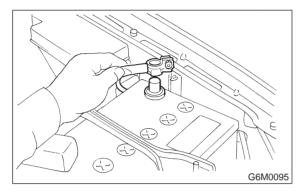


4) Disconnect connector from fuel pump.

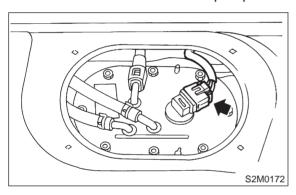


- 5) Move clips, and then disconnect fuel delivery hose (A), return hose (B) and jet pump hose (C).
- 6) Disconnect quick connector, and then disconnect fuel delivery hose (A). <Ref. to 2-8 [W6A0].>

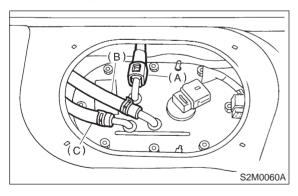

7) Remove nuts which install fuel pump assembly onto fuel tank.

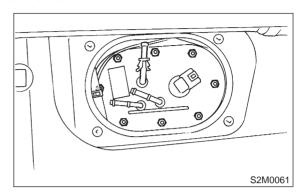

8) Take off fuel pump from fuel tank.

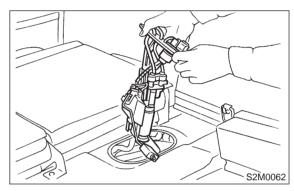


B: INSPECTION

Connect lead harness to connector terminal of fuel pump, and apply battery power supply to check whether the pump operate.

WARNING:

- Wipe off the fuel completely.
- Keep battery as far apart from fuel pump as possible.
- Be sure to turn the battery supply ON and OFF on the battery side.
- Do not run fuel pump for a long time under non-load condition.

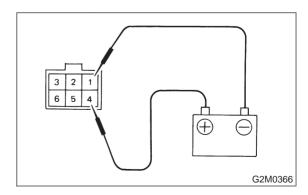


C: INSTALLATION

Installation is in the reverse order of removal. Do the following:

- (1) Always use new gaskets.
- (2) Ensure sealing portion is free from fuel or foreign particles before installation.
- (3) Tighten nuts in numerical sequence shown in Figure to specified torque.

Tightening torque:

4.4±1.5 N·m (0.45±0.15 kg-m, 3.3±1.1 ft-lb)

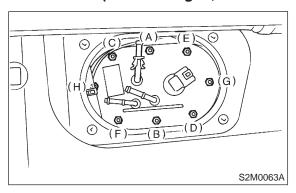

5. Fuel Meter Unit


A: REMOVAL

1. WITHOUT ORVR MODEL


NOTE:

Fuel meter unit is built in fuel pump assembly.


- 1) Release fuel pressure. <Ref. to 2-2 [W9B0].>
- 2) Remove fuel filler cap.
- 3) Disconnect battery ground cable.

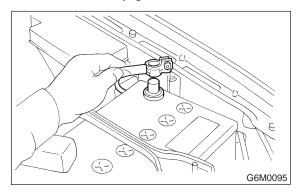

4) Disconnect connector from fuel pump.

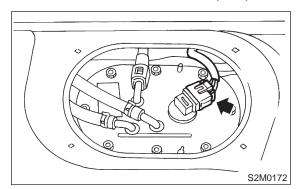

- 5) Move clips, and then disconnect fuel return hose (B) and jet pump hose (C).
- 6) Disconnect quick connector, and then disconnect fuel delivery hose (A). <Ref. to 2-8 [W6A0].>

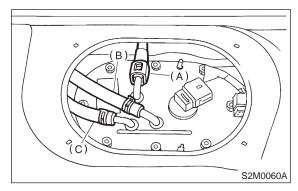

7) Remove nuts which install fuel pump assembly onto fuel tank.