


11. Vehicle Speed Sensor (For MT Vehicle)

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Lift-up the vehicle.
- 3) Remove front and center exhaust pipes. <Ref. to 2-9 [W1A0].>
- 4) Disconnect connector from vehicle speed sensor.
- 5) Turn and remove vehicle speed sensor.

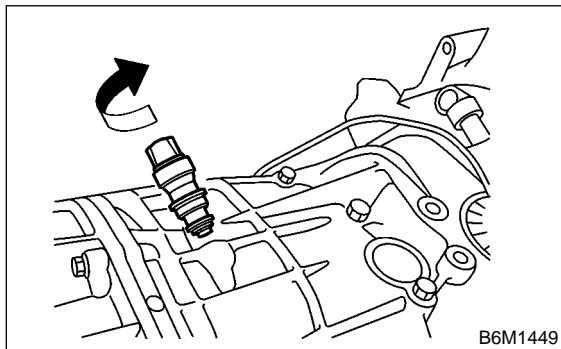

B: INSTALLATION

NOTE:

- Discard vehicle speed sensor and after removal, replace with a new one.
- Ensure sensor mounting hole is clean and free of foreign matter.
- Align tip end of key with key groove on end of speedometer shaft during installation.

- 1) Hand tighten vehicle speed sensor.
- 2) Tighten vehicle speed sensor using suitable tool.

Tightening torque:

$5.9 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.6 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.3 \pm 0.4 \text{ ft}\cdot\text{lb}$)

- 3) Connect connector to vehicle speed sensor.
- 4) Install front and center exhaust pipes. <Ref. to 2-9 [W1B0].>