


## 4. Datum Points and Dimensions Concerning On-Board Aiming Adjustment

If headlight aiming is misaligned due to a damaged body panel, repair headlight mating surface using body and headlight datum points as a guide.

**NOTE:**

It is recommended to conduct on-board aiming adjustment with headlights turned OFF. If turned ON during the adjustment, the duration should be within two minutes.

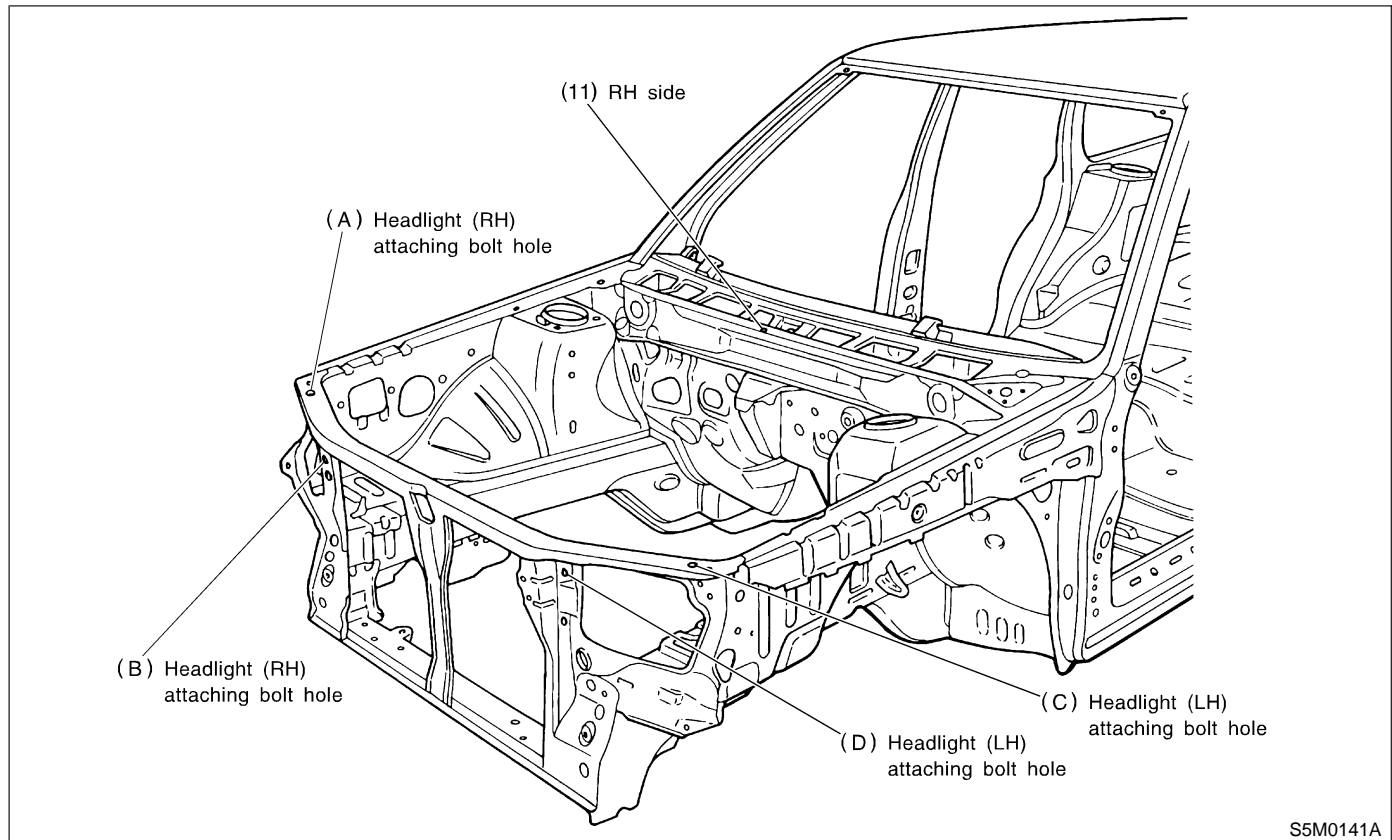

		Unit: mm (in)	
Point to point	Dimension	Point to point	Dimension
(11) to (A)	890.6 (35.06)	(11) to (C)	1,087.7 (42.82)
(11) to (B)	913.4 (35.96)	(11) to (D)	1,023.7 (40.30)