


2. Fuel Flap

A: REMOVAL AND INSTALLATION

1. FUEL FLAP

- 1) Remove bolts which hold hinge to vehicle body, and detach fuel flap and hinge as a unit.

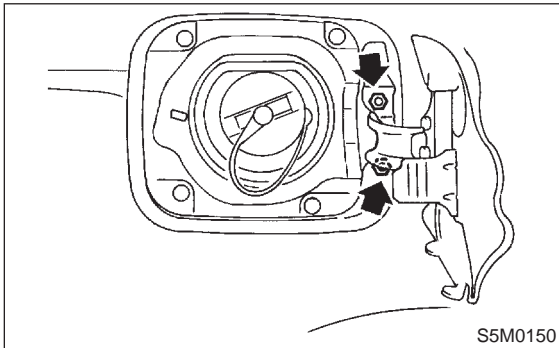


- 2) Install in the reverse order of removal.

CAUTION:

Make sure the clearance between the fuel flap and vehicle body is equal at all points.

2. FUEL FLAP OPENER

- 1) Remove driver's seat and rear seat cushion.
- 2) Turn over the floor mat (driver's side).
- 3) Remove all clips which hold cable.
- 4) Disconnect cable (A) from pull handle (B).
- 5) Detach pull handle by removing bolts.

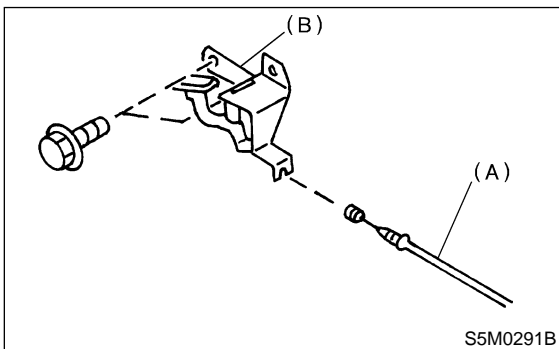

- 6) Detach fuel lock holder by turning it.
- 7) Install in the reverse order of removal.


CAUTION:

After installing opener cable, ensure it moves smoothly.


3. Front Bumper

A: REMOVAL AND INSTALLATION

- 1) Disconnect the ground cable from the battery.
- 2) Remove front fog light. <Ref. to 6-2 [W13A0].>
- 3) Remove the front grille. <Ref. to 5-1 [W12A0].>
- 4) Remove the extension of both sides.

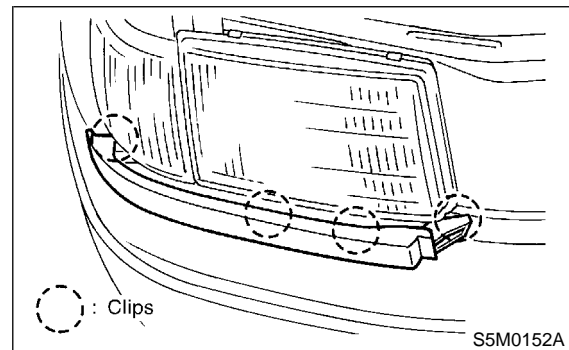

- 5) Remove the seven clips and then detach plate (A).

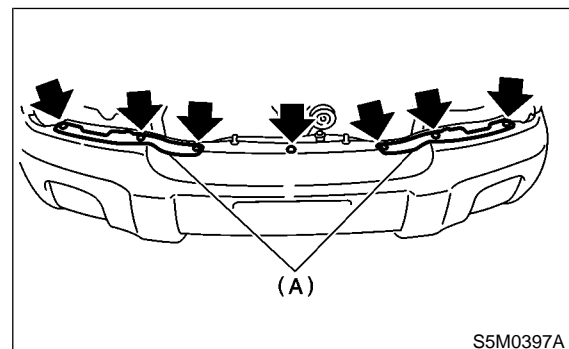

- 6) Remove under cover. <Ref. to 5-1 [W13A0].>
- 7) Remove the seven clips from under side of bumper.

