## 2. Door Lock System

No.	Trouble	Possible cause	Remedy
1	Door cannot be opened by outer handle. (Door can be opened by inner handle.)	Disconnect outer handle rod.	Connect firmly.
2	Door cannot be opened by inner handle. (Door can be opened by outer handle.)	<ul><li>a. Joint of lower rod is disconnected.</li><li>b. Rear door child lock lever is set to lock side.</li></ul>	Connect firmly. Functionally normal.
3	Door does not open when outer or inner handle is operated with inner lock knob set to unlock position.	a. Joint of upper rod is disconnected.     b. Lock is not released due to improper adjustment of upper rod.	Connect firmly. Remove rod from latch. Adjust rod so that lock knob is set in "lock" position.
4	Door opens even when inner lock knob is set to lock position. (Keyless locking is impossible.)	<ul><li>a. Upper rod joint is separated.</li><li>b. Door is not locked due to improperly adjusted upper rod.</li></ul>	Same as a in No. 3. Same as a in No. 3.
5	Child lock lever will not come up.	<ul><li>a. Inner handle fails to return completely.</li><li>b. Joint of lower rod is disconnected.</li></ul>	Refer to No. 6.
6	Inner handle stops halfway.	Contact of lower rod with inner handle mounting case.	Eliminate contact by bending upper rod properly.
7	Door cannot be locked or unlocked by key.	Joint of key lock rod is disconnected.	Connect firmly.
8	Auto door-lock switch does not react when inner lock knob is pushed.	Auto door-lock switch does not react due to improperly adjusted lower rod.	Same as a in No. 3.

## 3. Power Window

	Symptom				
	All windows do not move.	Driver's door window does not move.	Driver's door window does not move at "AUTO" down.	Neither passenger side windows move.	
Battery	(1)				
Fuse in fuse box	(2)				
Circuit breaker and relay	(3)				
Main switch	(4)	(1)	(1)	(1)	
Sub switch of each passenger side				(2)	
Motor of driver side		(2)	(2)		
Motor of each passenger side				(3)	
Regulator assembly of each window				(4)	
Power supply line of main switch	(5)	(3)	(3)		
Ground line	(6)				
Harness and connector	(7)	(4)	(4)	(5)	
( ): Figures in a parenthesis refer to diagnostics procedures					