

3. Front Seat Belt


A: REMOVAL AND INSTALLATION

WARNING:



Replace front seat belt worn by occupants of a vehicle that has been in a serious accident. The entire assembly should be replaced even if damage is not obvious.

1. OUTER BELT


- 1) Remove anchor cover.
- 2) Remove shoulder anchor bolt (A).
- 3) Remove center pillar cover (B). <Ref. to 5-3 [W5A1].>

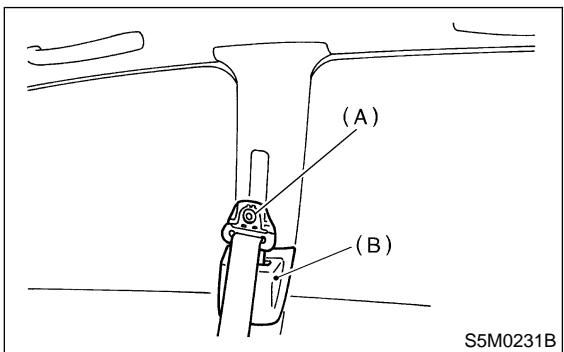

- 4) Remove center lower pillar trim panel. <Ref. to 5-3 [W5A1].>
- 5) Remove webbing guide.

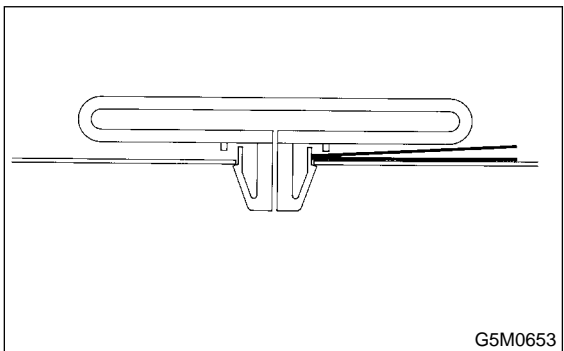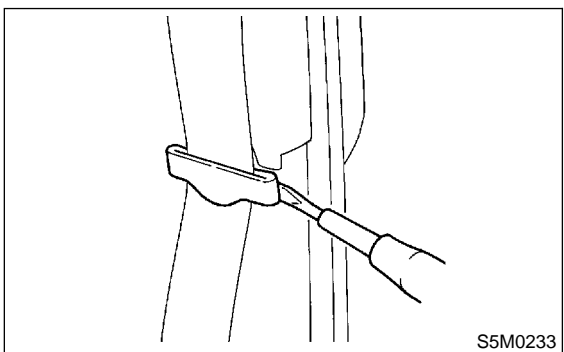

- 6) Remove lap anchor bolt.
- 7) Remove belt retractor and outer belt.

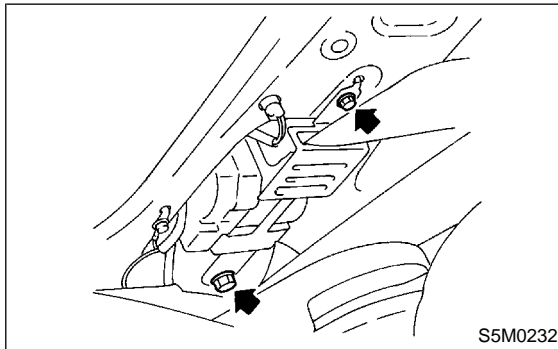


- 8) Install in the reverse order of removal.

CAUTION:

- The left and right ELR's are not mutually interchangeable because different sensors are used.
- Be careful not to twist belts during installation.

2. INNER BELT


- 1) Disconnect connector.
- 2) Remove anchor bolt and then detach inner belt.

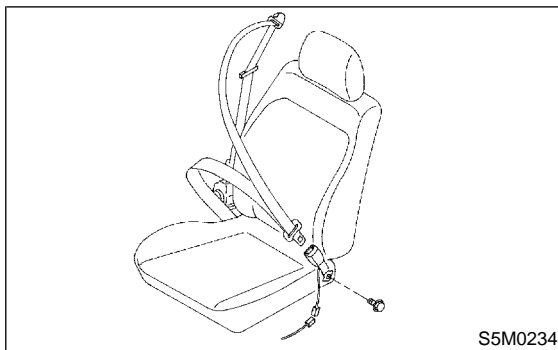

- 3) Install in the reverse order of removal.

3. ADJUSTABLE SHOULDER ANCHOR

- 1) Remove shoulder anchor bolt. <Ref. to 5-3 [W3A1].>
- 2) Remove center pillar cover. <Ref. to 5-3 [W5A1].>
- 3) Remove center pillar upper trim. <Ref. to 5-3 [W5A1].>
- 4) Remove adjustable shoulder anchor assembly.

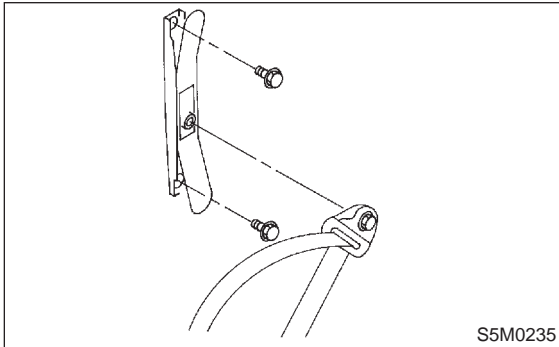


- 5) Install in the reverse order of removal.

4. Rear Seat Belt**A: REMOVAL AND INSTALLATION****WARNING:**

Replace rear seat belt worn by occupants of a vehicle that has been in a serious accident. The entire assembly should be replaced even if damage is not obvious.

1. OUTER BELT (OUTSIDE)

- 1) Remove rear cushion. <Ref. to 5-3 [W2A1].>
- 2) Remove rear backrest. <Ref. to 5-3 [W2A2].>
- 3) Remove rear quarter upper trim and rear quarter lower trim. <Ref. to 5-3 [W5A2].>
- 4) Remove anchor cover and then remove anchor bolt.
- 5) Remove bolt and nut and then detach outer belt assembly.

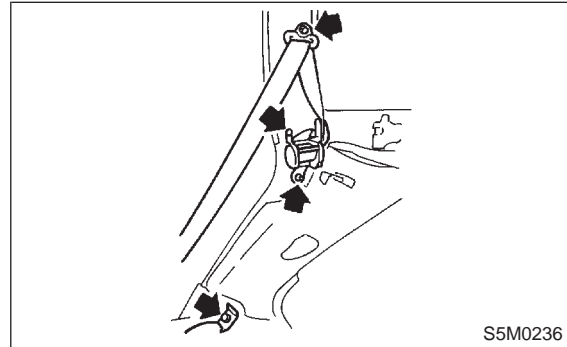

- 6) Install in the reverse order of removal.

NOTE:

Ensure that seat belt is properly reeled on and off after installation of ELR.

CAUTION:

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.
- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.