
## 1. Lubrication System

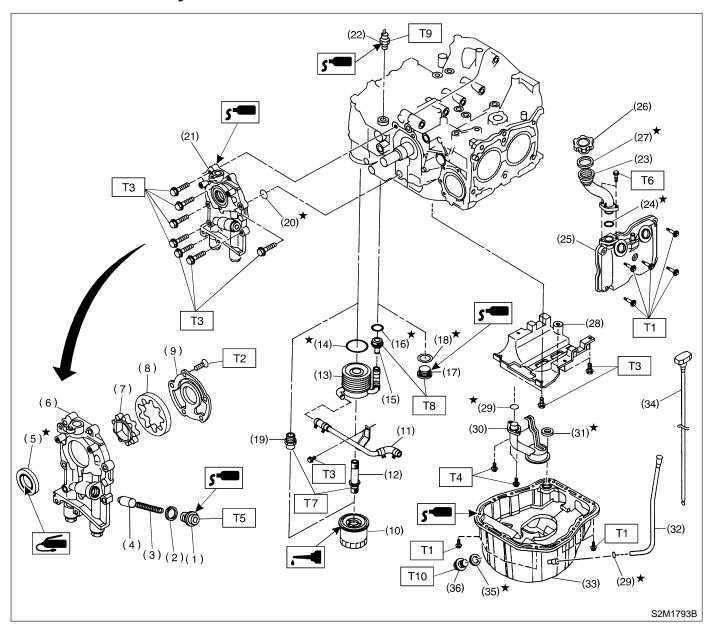

## **2-4** [C100]

## 1. Lubrication System

## **COMPONENT PARTS**

- (1) Plug
- (2) Washer
- (3) Relief valve spring
- (4) Relief valve
- (5) Oil seal
- (6) Oil pump case
- (7) Inner rotor
- (8) Outer rotor
- (9) Oil pump cover
- (10) Oil filter
- (11) Oil cooler pipe and hose ASSY (AT vehicles)
- (12) Connector (AT vehicles)
- (13) Oil cooler (AT vehicles)
- (14) Gasket (AT vehicles)
- (15) Nipple (AT vehicles)
- (16) Gasket (AT vehicles)

- (17) Plug (MT vehicles)
- (18) Gasket (MT vehicles)
- (19) Oil filter connector (MT vehicles)
- (20) O-ring
- (21) Oil pump ASSY
- (22) Oil pressure switch
- (23) Oil filler duct
- (24) O-ring
- (25) Cylinder head cover
- (26) Oil filler cap
- (27) O-ring
- (28) Baffle plate
- (29) O-ring
- (30) Oil strainer
- (31) Gasket
- (32) Oil level gauge guide
- (33) Oil pan

- (34) Oil level gauge
- (35) Metal gasket
- (36) Drain plug

Tightening torque: N-m (kg-m, ft-lb)

T1: 5 (0.5, 3.6)

T2:  $5^{+1}/_{-0}$  (0.5<sup>+0.1</sup>/<sub>-0</sub>, 3.6<sup>+0.7</sup>/<sub>-0</sub>)

T3: 6.4 (0.65, 4.7)

T4: 10 (1.0, 7.0)

T5: 44.1±3.4 (4.5±0.35, 32.5±2.5)

*T6:* 6.4±0.5 (0.65±0.05, 4.7±0.4)

*T7:* 54±5 (5.5±0.5, 39.8±3.6)

*T8:* 69±7 (7.0±0.7, 50.6±5.1)

*T9: 25±3 (2.5±0.3, 18.1±2.2)* 

T10: 44 (4.5, 33)