


1. Intake Manifold

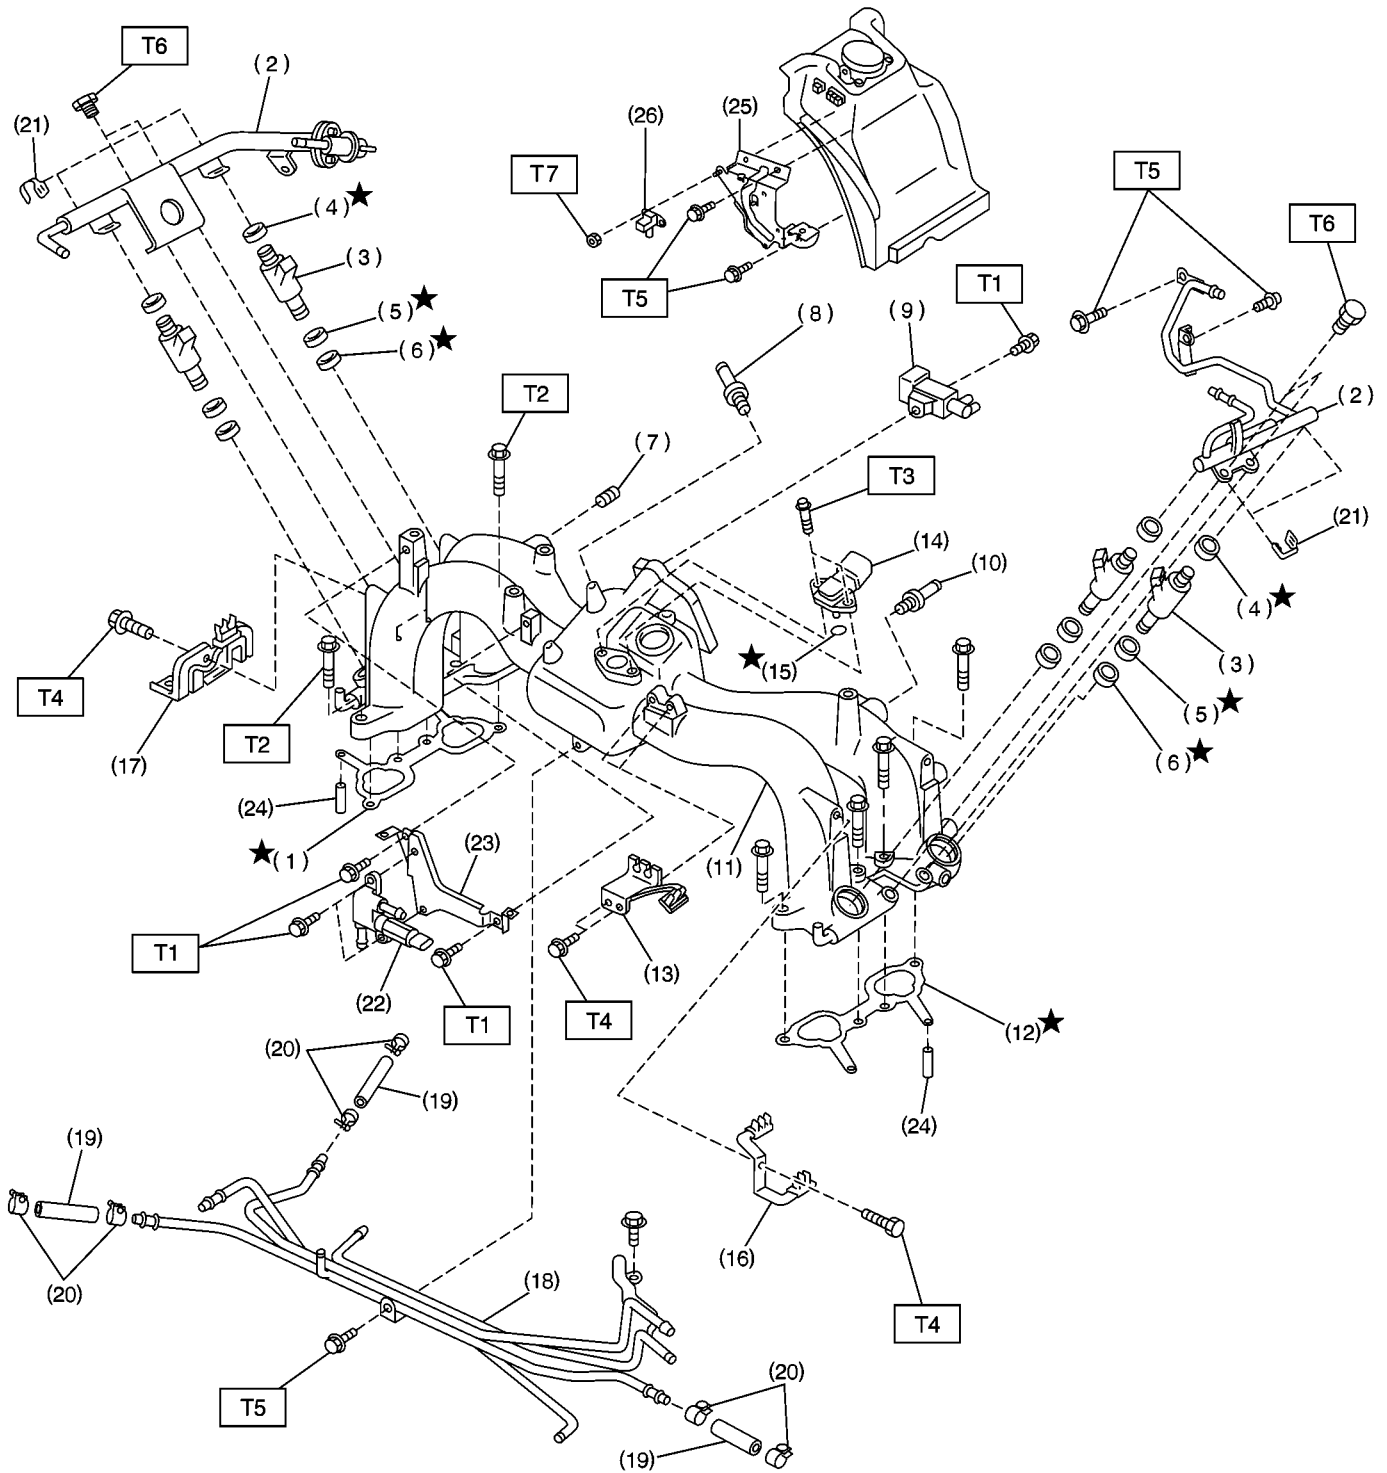

S2M1951A

- (1) Intake manifold gasket RH
- (2) Fuel injector pipe
- (3) Fuel injector
- (4) O-ring
- (5) O-ring
- (6) O-ring
- (7) Plug
- (8) PCV valve
- (9) Purge control solenoid valve
- (10) Nipple
- (11) Intake manifold
- (12) Intake manifold gasket LH
- (13) Bracket

- (14) Intake air temperature and pressure sensor
- (15) O-ring
- (16) Bracket LH
- (17) Bracket RH
- (18) Fuel pipe ASSY
- (19) Fuel hose
- (20) Clip
- (21) Clip
- (22) Air assist injector solenoid valve
- (23) Air assist injector solenoid valve bracket
- (24) Guide pin

- (25) Atmospheric pressure sensor bracket
 - (26) Atmospheric pressure sensor
-

Tightening torque: N-m (kg-m, ft-lb)

T1: 16±1.5 (1.6±0.15, 11.6±1.1)

T2: 25±2 (2.5±0.2, 18.1±1.4)

T3: 2.0±0.4 (0.2±0.04, 1.4±0.3)

T4: 18.6±1.5 (1.9±0.15, 13.7±1.1)

T5: 4.9±0.5 (0.5±0.05, 3.6±0.4)

T6: 3.4±0.5 (0.35±0.05, 2.5±0.4)

T7: 6.4±0.5 (0.65±0.05, 4.7±0.4)
