
1-3 [G8A0] 8. Front Hood Stay Installation

8. Front Hood Stay Installation

A: AT THE CHECK AND GENERAL MAINTENANCE

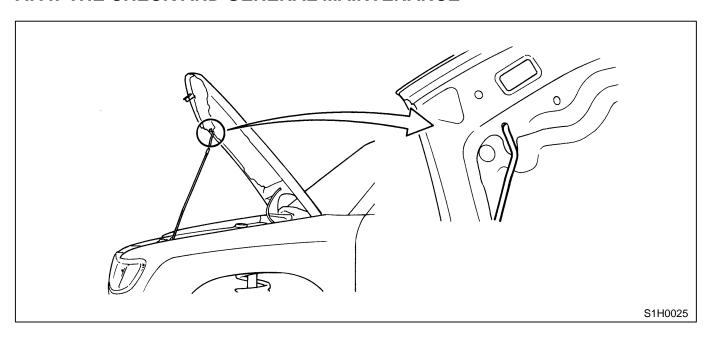

B: WHEN WIDER HOOD OPENING IS NECESSARY

Set stay into the hole of hood inner as shown in the figure below.

