
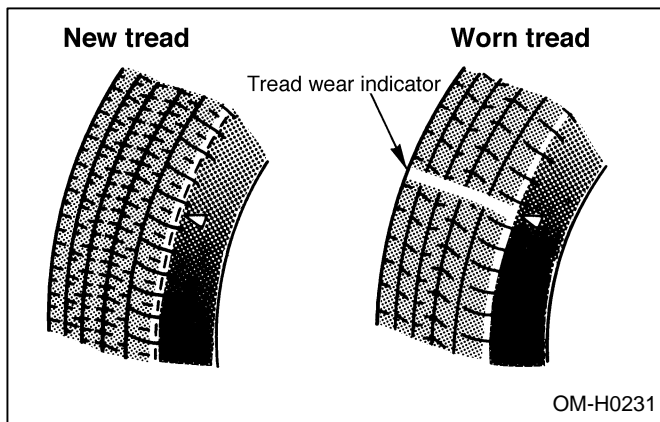


21. Tire Rotation

MAINTENANCE INTERVAL																	
[Number of months or km (miles), whichever occurs first]																	
Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120
× 1,000 km	4.8	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192
× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120

A: INSPECTION

- 1) Replace the tire if the tread depth is less than 0.063 in (1.6 mm) or if wear indicators appear across the tire tread. (It is recommended that both right and left tires are replaced as a set.)
- 2) Adjust the wheel alignment if abnormally uneven tire wear is found.
- 3) Also, rotate the tires between the front and rear tires as illustrated, in order to ensure uniform tire wear

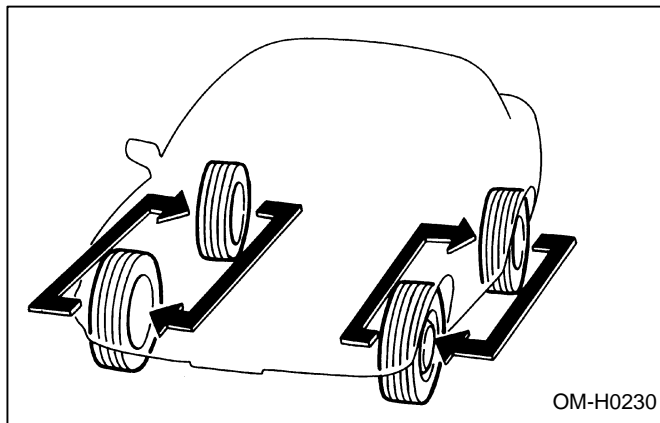

1-5

PERIODIC MAINTENANCE SERVICES

MEMO