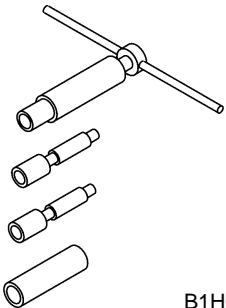
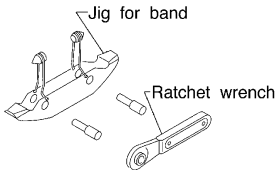
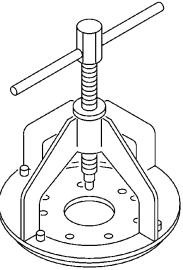
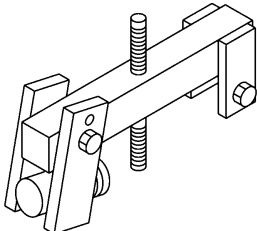
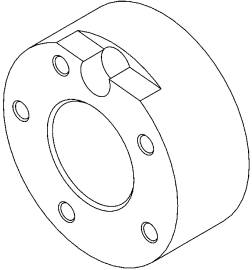
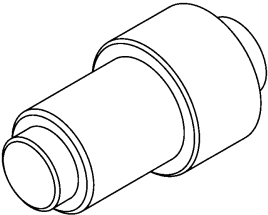
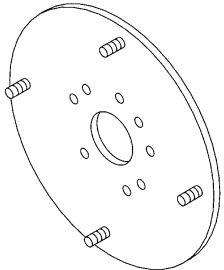
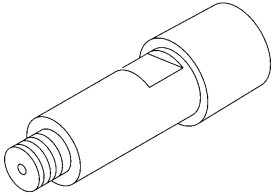
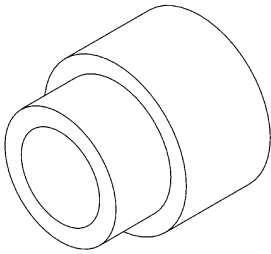
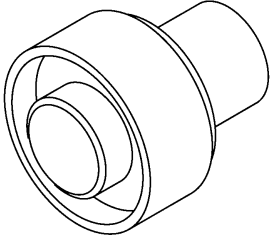


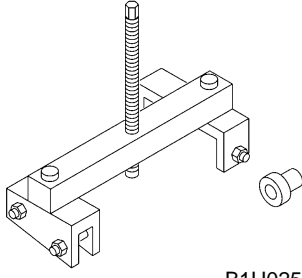
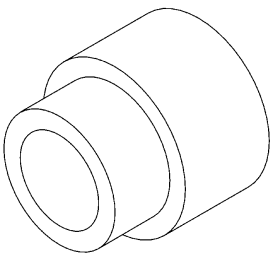
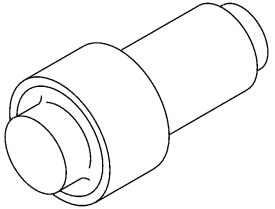
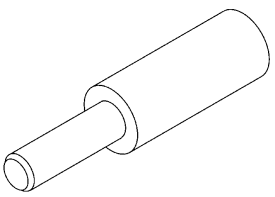
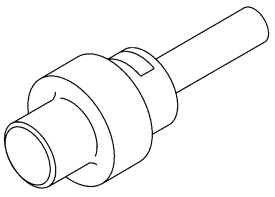
**1-6 [G600]****6. Wheels and Axles Tools****SPECIAL TOOLS****6. Wheels and Axles Tools**

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0145</p>	922431000	AXLE SHAFT INSTALLER	<ul style="list-style-type: none"> <li>Used for installing axle shaft into housing.</li> <li>Used with ADAPTER (927390000).</li> </ul>
 <p>B1H0146A</p>	925091000	BAND TIGHTENING TOOL	Used for tightening boot band.
 <p>H1H0503</p>	926470000	AXLE SHAFT PULLER	Used for removing front axle shaft.
 <p>G1H0250</p>	927060000	HUB REMOVER	Used for removing front hub.
 <p>B1H0248</p>	927080000	HUB STAND	Used for disassembling and assembling hub bolt in rear hub.

**SPECIAL TOOLS**[G600] 1-6  
6. Wheels and Axles Tools





ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>G1H0252</p>	927100000	BEARING PULLER	<ul style="list-style-type: none"> <li>Used for disassembling and assembling front housing bearing.</li> <li>Used with HOUSING STAND (927400000).</li> </ul>
 <p>B1H0249</p>	927140000	AXLE SHAFT PULLER PLATE	Same as plate 2 included in AXLE SHAFT PULLER (926470000).
 <p>B1H0250</p>	927390000	ADAPTER	Used as an adapter for AXLE SHAFT INSTALLER (922431000).
 <p>B1H0251</p>	927400000	HOUSING STAND	<ul style="list-style-type: none"> <li>Used for disassembling and assembling front housing bearing.</li> <li>Used with BEARING PULLER (927100000).</li> </ul>
 <p>G1H0256</p>	927410000	OIL SEAL INSTALLER	Used for installing oil seal into front housing.

**1-6 [G600]****6. Wheels and Axles Tools****SPECIAL TOOLS**

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0252</p>	927420000	HUB REMOVER	Used for removing rear hub.
 <p>B1H0251</p>	927430000	HOUSING STAND	<ul style="list-style-type: none"> <li>• Used for disassembling and assembling rear housing bearing.</li> <li>• Used with BEARING PULLER (927440000).</li> </ul>
 <p>B1H0254</p>	927440000	BEARING REMOVER	<ul style="list-style-type: none"> <li>• Used for disassembling and assembling rear housing bearing.</li> <li>• Used with HOUSING STAND (927430000).</li> </ul>
 <p>B1H0255</p>	927120000	HUB INSTALLER	Used for installing hub.
 <p>B1H0256</p>	927450000	HUB INSTALLER	<ul style="list-style-type: none"> <li>• Used for pressing rear hub into housing assembly.</li> <li>• Used with HOUSING STAND (927430000).</li> </ul>

**SPECIAL TOOLS**

[G600] 1-6  
6. Wheels and Axles Tools

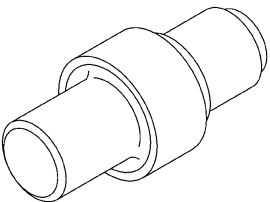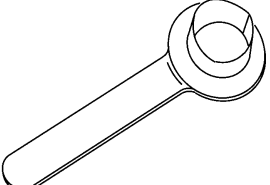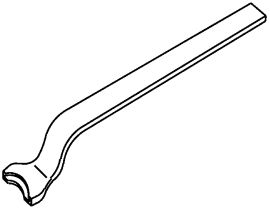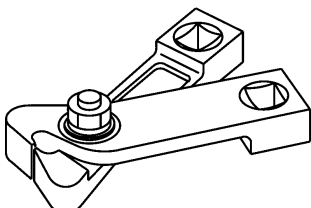ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0257</p>	927460000	OIL SEAL INSTALLER	<ul style="list-style-type: none"> <li>Used for installing outer bearing and sub bearing into housing.</li> <li>Used with HOUSING STAND (927430000).</li> </ul>
 <p>G1H0303</p>	28099PA090	OIL SEAL PROTECTOR	<ul style="list-style-type: none"> <li>Used for installing rear drive shaft into rear differential.</li> <li>For protecting oil seal.</li> </ul>
 <p>G1H0338</p>	28099PA100	DRIVE SHAFT REMOVER	Used for removing rear drive shaft from rear differential.
 <p>B1H0272</p>	28099AC000	BOOT BAND PLIER	Used for tightening boot band.