


13. Fluid Passages

A: TRANSMISSION CASE (FRONT SIDE)

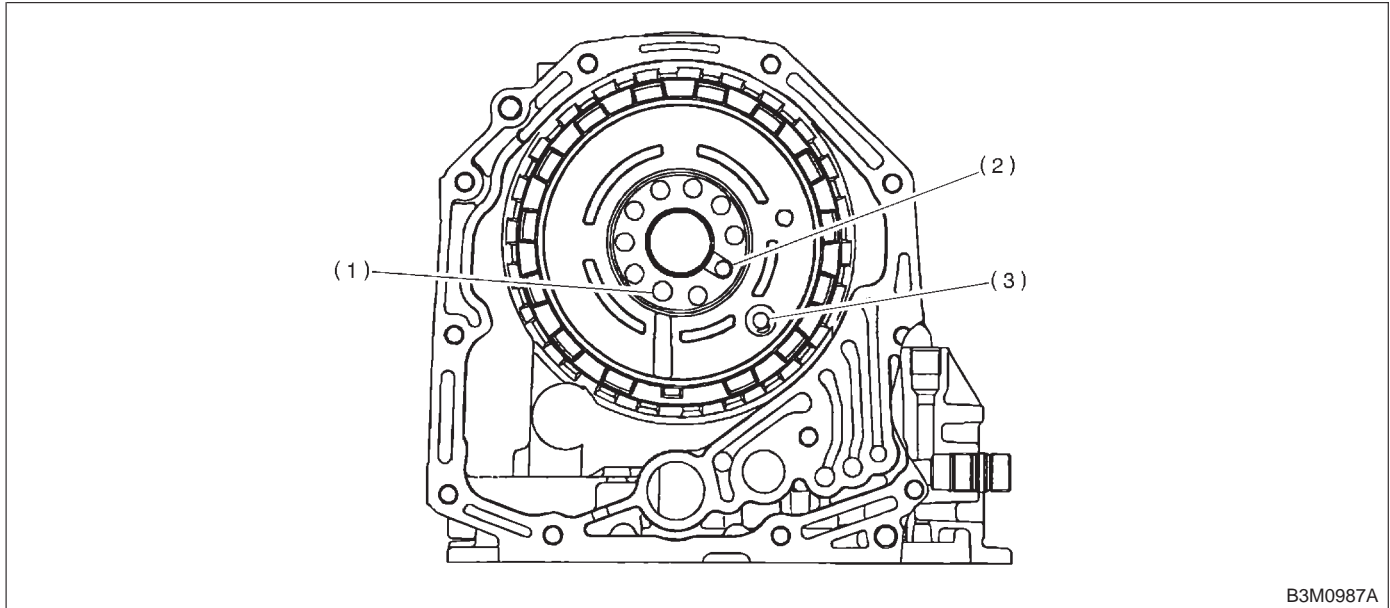


B3M0987A

(1) Low clutch pressure

(2) Oil cooler inlet pressure

(3) Low & reverse brake pressure

B: TRANSMISSION CASE (LH SIDE)

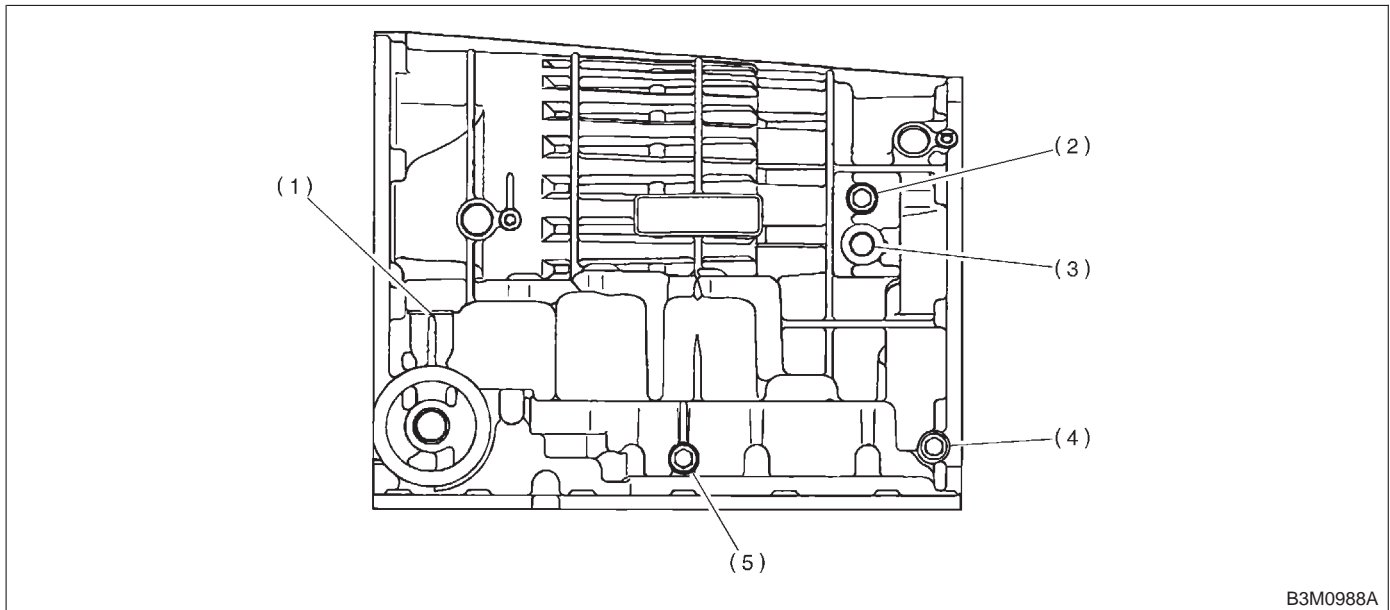

B3M0988A

(1) Oil cooler outlet pressure


(3) Oil cooler inlet pressure

(5) 2-4 brake pressure

(2) Low & reverse brake pressure

(4) Low clutch pressure


E: OIL PUMP HOUSING

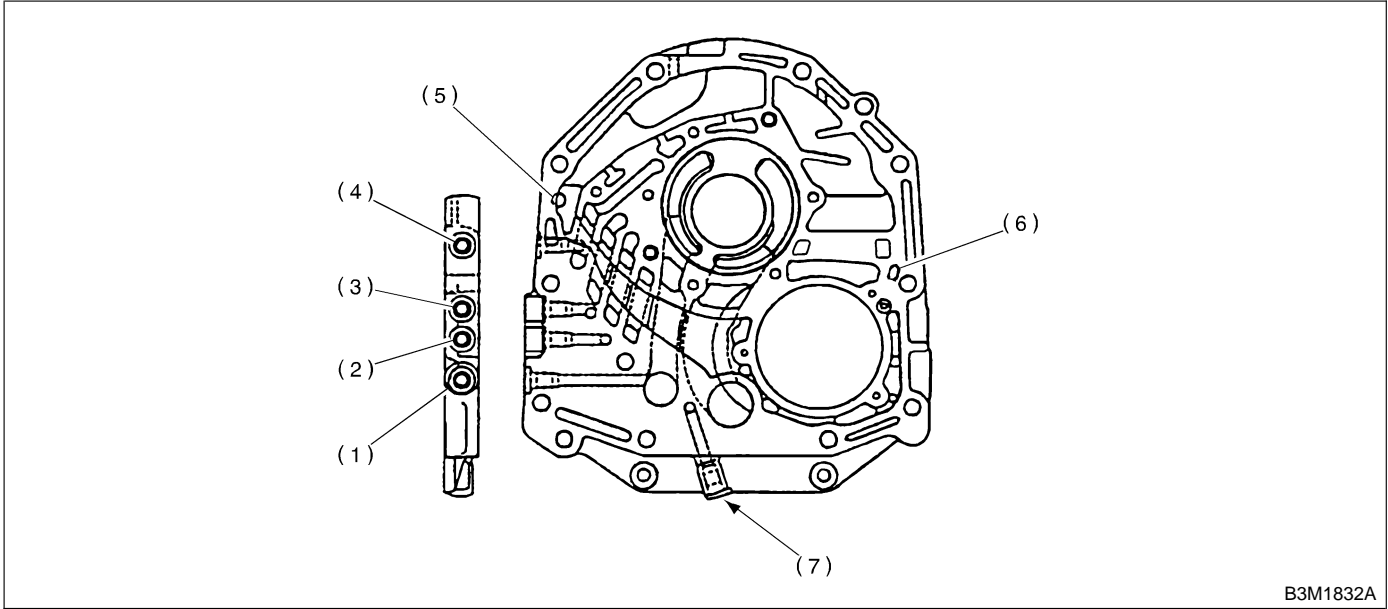

B3M1832A

- | | | |
|------------------------------|--------------------------|-----------------------------|
| (1) Oil pump outlet pressure | (4) High clutch pressure | (7) Reverse clutch pressure |
| (2) Lock-up apply pressure | (5) Drain | |
| (3) Lock-up release pressure | (6) Air breather | |


F: TRANSMISSION CASE

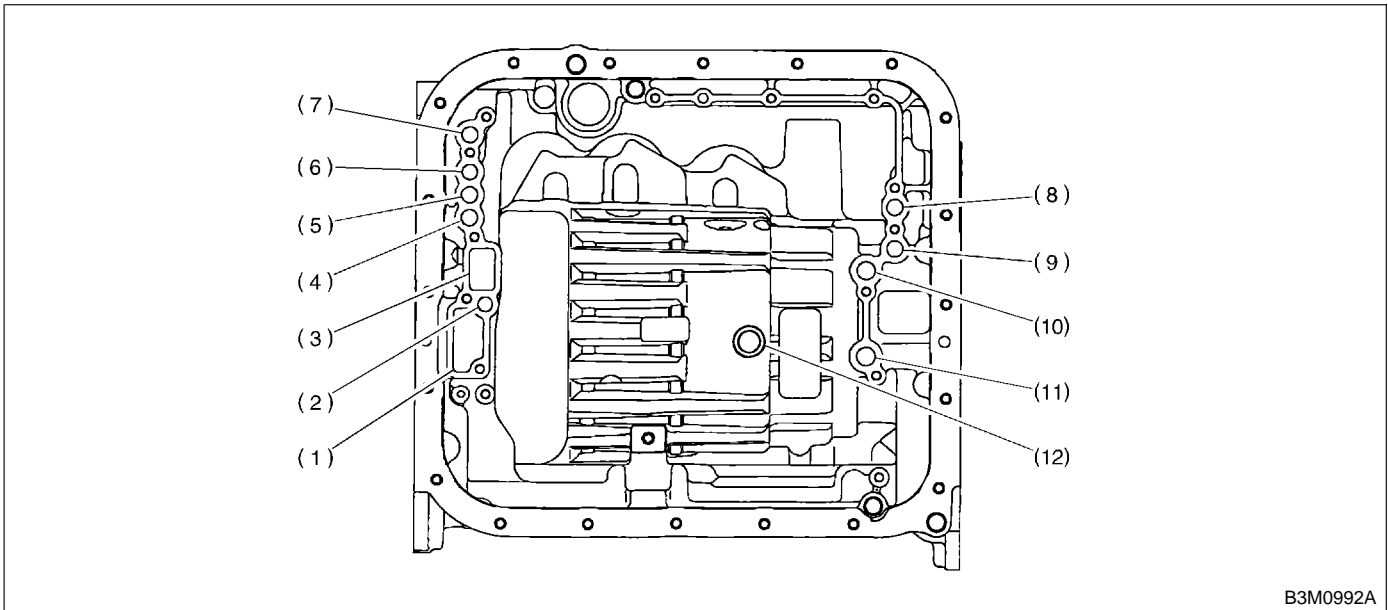

B3M0992A

- | | | |
|-----------------------------|--------------------------------|-----------------------------------|
| (1) Oil pump inlet port | (5) Lock-up release pressure | (9) Pilot pressure |
| (2) Reverse clutch pressure | (6) High clutch pressure | (10) Low & reverse brake pressure |
| (3) Oil pump outlet port | (7) Oil cooler outlet pressure | (11) Low clutch pressure |
| (4) Lock-up apply pressure | (8) Line pressure | (12) 2-4 brake pressure |

G: EXTENSION CASE

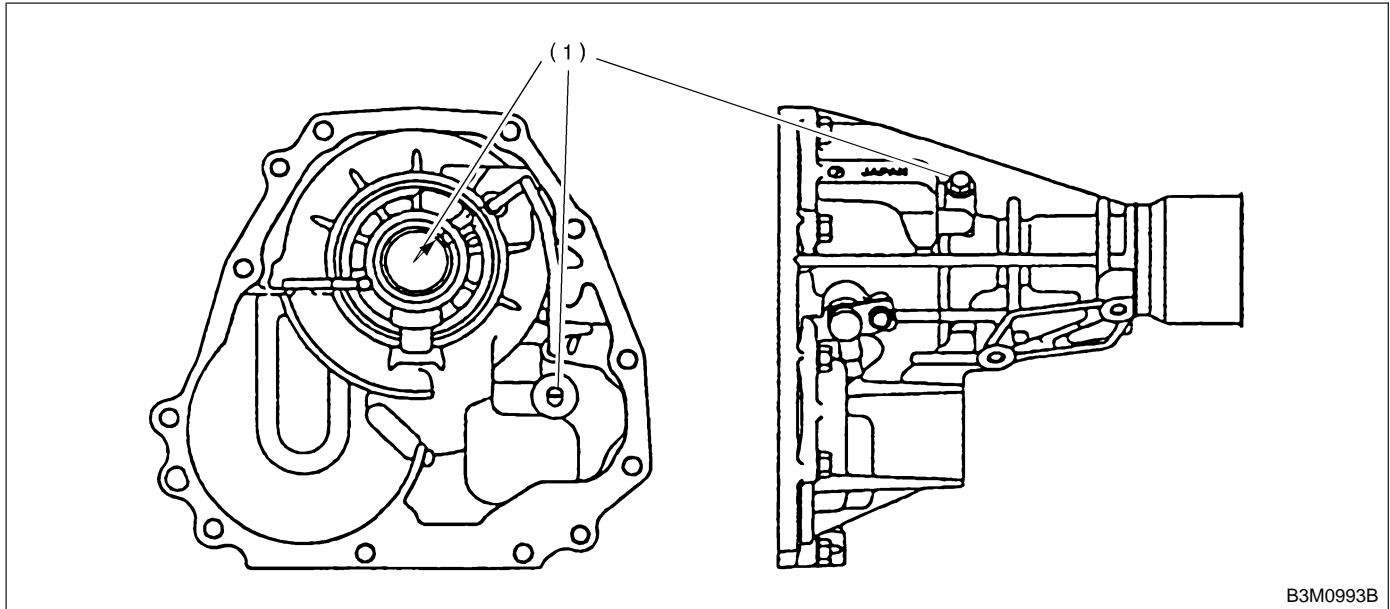

(1) Transfer clutch pressure