BODY SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD.

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)	AC
AIRBAG SYSTEM	AB
SEAT BELT SYSTEM	SB
LIGHTING SYSTEM	LI
WIPER AND WASHER SYSTEMS	WW
ENTERTAINMENT	ET
COMMUNICATION SYSTEM	СОМ
GLASS/WINDOWS/MIRRORS	GW
BODY STRUCTURE	BS
BODY STRUCTURE	BS IDI
INSTRUMENTATION/DRIVER INFO	IDI
INSTRUMENTATION/DRIVER INFO SEATS	IDI SE
INSTRUMENTATION/DRIVER INFO SEATS SECURITY AND LOCKS SUNROOF/T-TOP/CONVERTIBLE TOP	IDI SE SL
INSTRUMENTATION/DRIVER INFO SEATS SECURITY AND LOCKS SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)	IDI SE SL SR

ENTERTAINMENT

ET

1.	General Description	Page
2.	Radio System	
3.	Cigarette Lighter System	
4.	Accessory Power Socket System	10
	Radio Body	
6.	Front Speaker	12
7.	Rear Speaker	13
8.	Antenna	14
9.	Antenna Amplifier	15
10.	Cigarette Lighter	
11.	Accessory Power Socket	17

1. General Description sector

A: CAUTION S901001A03

• Before disassembling or reassembling parts, always disconnect battery ground cable. When replacing radio, control module, and other parts provided with memory functions, record memory contents before disconnecting the battery ground cable. Otherwise, the memory will be erased.

• Reassemble in reverse order of disassembly, unless otherwise indicated.

• Adjust parts to the given specifications.

• Connect connectors and hoses securely during reassembly.

• After reassembly, make sure functional parts operate smoothly.

B: PREPARATION TOOL S901001A17


1. GENERAL TOOLS S901001A1701

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resis- tance and voltage.
Conductive Silver Composi- tion (DUPONT NO. 4817 or equivalent)	Used for repairing antenna wire.


MEMO:

2. Radio System S901467


- A: SCHEMATIC S901467A21
- 1. RADIO LHD MODEL S901467A2103

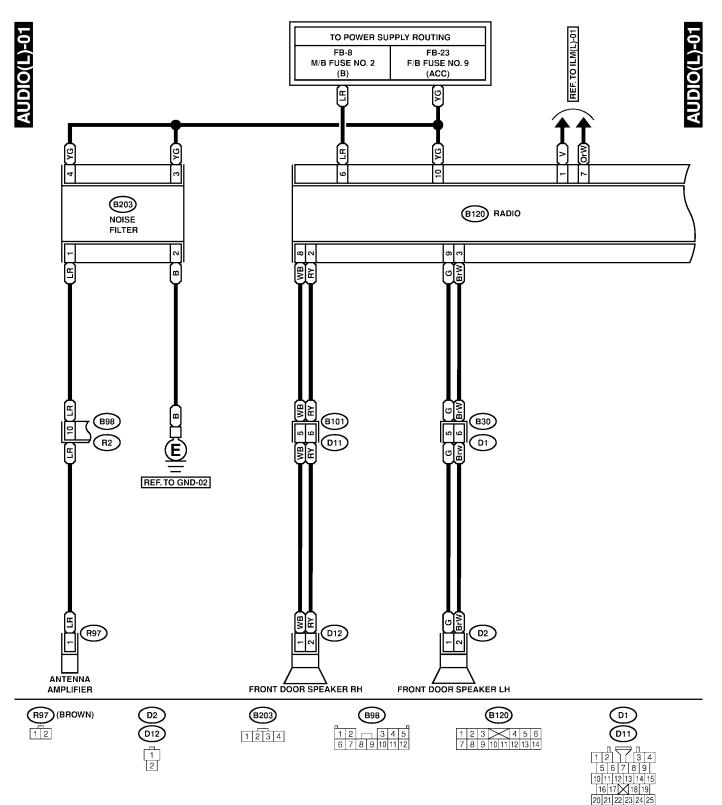


RADIO SYSTEM

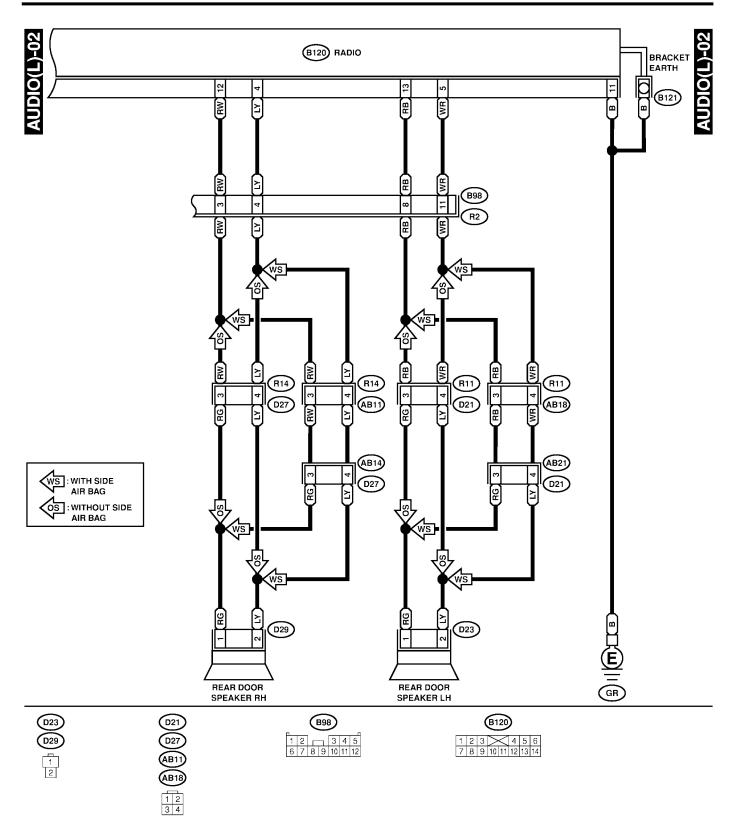

2. RADIO RHD MODEL S901467A2104

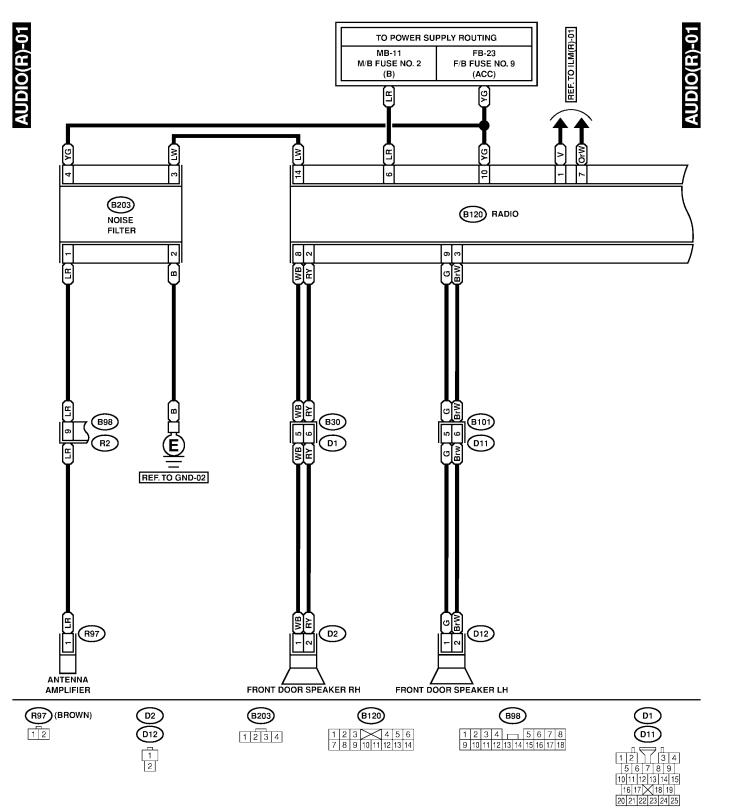

RADIO SYSTEM

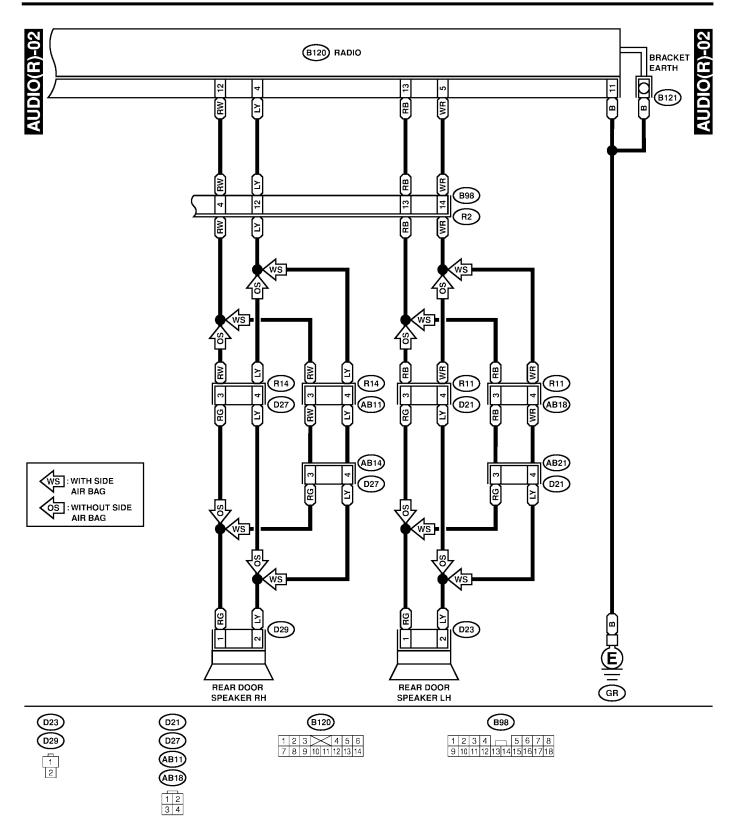

B: INSPECTION S901467A10


Symptom	Repair order
No power coming in (No display and no sound from speakers)	 Check fuse and power supply for radio. Check radio ground. Remove radio for repair.
A specific speaker does not operate.	(1) Check speaker.(2) Check output circuit between radio and speaker.
Radio generates noise with engine running	 Check radio ground. Check generator. Check ignition coil. Remove radio for repair.
AM and FM modes are weak or noisy	 (1) Check antenna. (2) Check antenna amplifier. (3) Check radio ground. (4) Remove radio for repair.

3. Cigarette Lighter System 5901494

A: SCHEMATIC S901494A21

FAPS-01

1. CIGARETTE LIGHTER S901494A2101

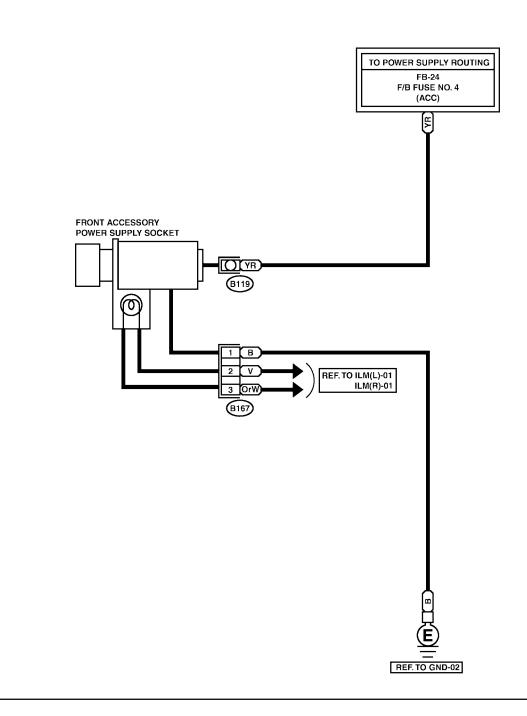


FAPS-01



4. Accessory Power Socket System SU01785

- A: SCHEMATIC S901785A21
- 1. ACCESSORY POWER SOCKET S901785A2101

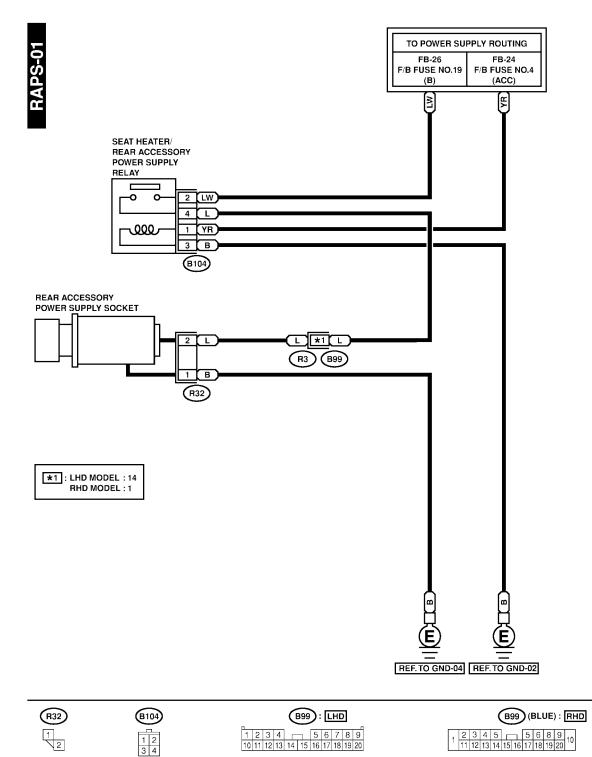



5. Radio Body S901469


A: REMOVAL S901469A18

1) Remove console box. <Ref. to EI-30 REMOVAL, Console Box.>

- 2) Remove AT cover (AT model).
- 3) Remove center panel.

4) Remove fitting screws, and slightly pull radio

out from center console.

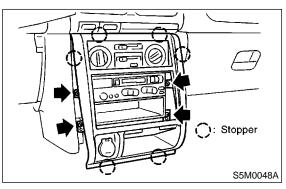

5) Disconnect electric connectors and antenna feeder cord.


B: INSTALLATION S901469A11

6. Front Speaker S901466

A: REMOVAL S901466A18

1) Remove front door trim. <Ref. to EI-26 REMOVAL, Front Door Trim.>

2) Remove front speaker mounting screws.

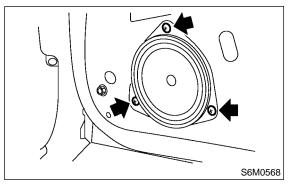

3) Disconnect harness connector and remove front speaker.


B: INSTALLATION S901466A11

7. Rear Speaker S901470

A: REMOVAL S901470A18

1) Remove rear door trim. <Ref. to EI-27> REMOVAL, Rear Door Trim.

2) Remove rear speaker mounting screws.

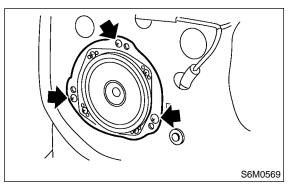

3) Disconnect harness connector and remove rear speaker.

B: INSTALLATION S901470A11

8. Antenna 5901463


A: INSPECTION S901463A10

Check continuity between antenna terminal and each antenna wire.


If an antenna wire is OK, continuity should exist. If an antenna wire is broken, no continuity should exist.

NOTE:

When checking continuity, wind a piece of tin foil around the tip of the tester probe and press the foil against the wire with your finger.

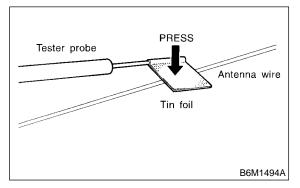

To locate the broken point, move the probe along the antenna wire.

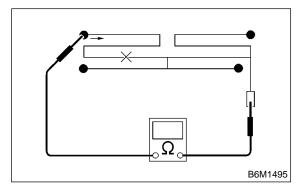


B: REPAIR S901463A19

1) Clean antenna wire and the surrounding area with a cloth dampened by alcohol.

2) Paste a thin masking film on glass along the broken wire.

3) Deposit conductive silver composition (DUPONT NO. 4817) on the broken portion with a drawing pen.

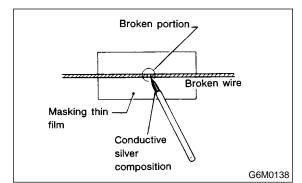

4) Dry out the deposited portion.

5) After repair has been completed, check repaired wire for continuity.


9. Antenna Amplifier 5901460

A: REMOVAL S901460A18

1) Remove rear quarter lower trim. <Ref. to EI-39 REMOVAL, Rear Quarter Trim.>

2) Disconnect harness connector and terminal.


3) Remove mounting screw and detach antenna amplifier.

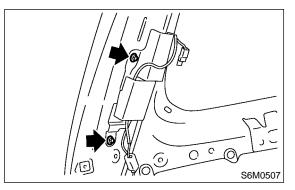

B: INSTALLATION S901460A11

Install in the reverse order of removal.

C: INSPECTION S901460A10

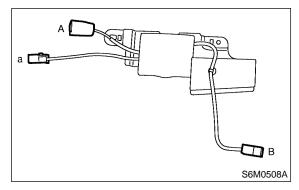

Measure resistance between terminal and amplifier body.


Tester connection	Resistance
A — Amplifier	More than 100 k Ω
B — Amplifier	More than 100 k Ω
a — Amplifier	More than 100 k Ω

10. Cigarette Lighter S901461

A: REMOVAL S901461A18

1) Remove center panel. <Ref. to ET-11 REMOVAL, Radio Body.>

2) Disconnect harness connectors and remove cigarette lighter.

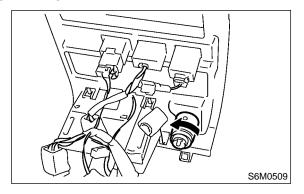


B: INSTALLATION S901461A11

11. Accessory Power Socket S901766

A: REMOVAL S901786A18

1) Remove rear quarter lower trim. <Ref. to EI-39, REMOVAL, Rear Quarter Trim.>

2) Disconnect harness connectors and remove accessory power socket.

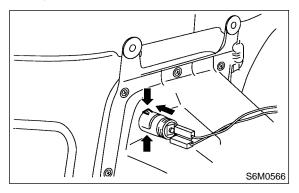

B: INSTALLATION S901786A11

MEMO: