

11. Extension Case Oil Seal

A: INSPECTION

Make sure the ATF does not leak from the joint of transmission and propeller shaft. If so, replace the oil seal. <Ref. to 4AT-47, REPLACEMENT, Extension Case Oil Seal.>

B: REPLACEMENT


- 1) Clean the transmission exterior.
- 2) Drain the ATF completely.

NOTE:

Tighten the drain plug (ATF) after draining the ATF.

Tightening torque:

25 N·m (2.5 kgf·m, 18.1 ft·lb)

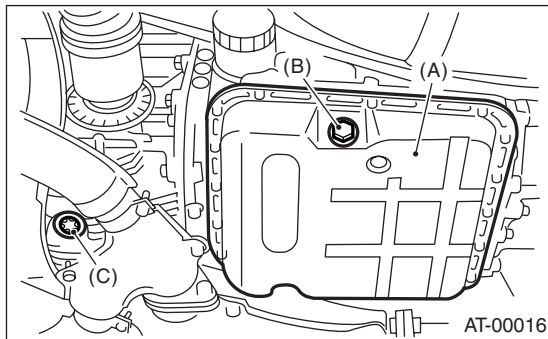

- (A) Oil pan
- (B) Drain plug (ATF)
- (C) Differential gear oil drain plug

- 3) Remove the rear exhaust pipe and muffler.

Non-turbo model

<Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-9, REMOVAL, Muffler.>

Turbo model

<Ref. to EX(H4DOTC)-13, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>

- 4) Remove the heat shield cover. (If equipped)

- 5) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>

- 6) Using the ST, remove the oil seal.

ST 398527700 PULLER ASSY

- 7) Using the ST, install the oil seal.

ST 498057300 INSTALLER

- 8) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>

- 9) Install the heat shield cover. (If equipped)

- 10) Install the rear exhaust pipe and muffler.

Non-turbo model

<Ref. to EX(H4SO)-8, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-9, INSTALLATION, Muffler.>

Turbo model

<Ref. to EX(H4DOTC)-13, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>

- 11) Pour ATF and check the ATF level. <Ref. to 4AT-29, Automatic Transmission Fluid.>