

## 16. Torque Converter Turbine Speed Sensor

### A: REMOVAL

When removing the torque converter turbine speed sensor, refer to "Front Vehicle Speed Sensor."  
<Ref. to 4AT-53, REMOVAL, Front Vehicle Speed Sensor.>

### B: INSTALLATION

When installing the torque converter turbine speed sensor, refer to "Front Vehicle Speed Sensor."  
<Ref. to 4AT-55, INSTALLATION, Front Vehicle Speed Sensor.>