

58.Rear Wiring Harness

A: LOCATION

• Rear wiring harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	8	Black	B-2	B97	Bulkhead wiring harness
R2	12	★	B-2	B98	
R3	24	★	B-2	B99	
R4	1	Black	B-3		Parking brake switch
R8	2	★	C-4		Seat belt switch (Manual seat)
R15	16	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R72	2	★	B-3		Rear ABS wheel speed sensor RH
R73	2	★	C-4		Rear ABS wheel speed sensor LH
R146	2	★	B-3		Rear accessory power supply socket
R188	8	Black	C-3		Power seat & seat heater and seat belt switch (with power seat)
R189	2	★	B-2		Occupant detection unit (Vehicles before V.I.N. 733000)

★: White or natural color

• Bulkhead wiring harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B97	8	Black	B-2	R1	Rear wiring harness
B98	12	★	B-2	R2	
B99	24	★	B-2	R3	
B266	8	★	B-2	D28	Rear door cord RH
B267	3	★	C-4		Front door switch LH
B268	3	★	B-2		Front door switch RH
B270	8	★	C-4	D22	Rear door cord LH

★: White or natural color

• Roof cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R50	8	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	2	★	B-2		Sunroof control unit & motor
R56	2	★	B-3		Spot map light
R139	3	★	B-2		Compass mirror

★: White or natural color

Rear Wiring Harness

WIRING SYSTEM

• Fuel tank cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R47	3	Black	B-4		Fuel tank pressure sensor
R57	16	★	B-3	R15	Rear wiring harness
R58	6	★	B-3		Fuel pump assembly
R59	2	★	B-4		Fuel gauge sub unit
R68	2	Gray	B-4		Pressure control solenoid valve
R69	2	Black	B-4		Drain valve

★: White or natural color

• Airbag wiring harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB7	12	Yellow	C-2		Airbag control module
AB8	12	Yellow	C-2		Airbag control module
AB9	2	Yellow	C-3		Inflator (Side LH)
AB10	4	Yellow	C-4		Side airbag sensor LH
AB11	2	Yellow	B-2		Inflator (Side RH)
AB12	4	Yellow	B-2		Side airbag sensor RH
AB19	2	Black	C-4		ELR pretensioner LH
AB20	2	Black	B-2		ELR pretensioner RH
AB50	2	Yellow	C-2	B34	Bulkhead harness
AB51	2	Yellow	C-3		Buckle switch (Vehicles after V.I.N. 733001)
AB52	2	Yellow	C-3		Seat position sensor (Vehicles after V.I.N. 733001)
AB53	4	Yellow	B-2		Occupant detection control module
	6	Yellow	B-2		Occupant detection control module
AB63	3	Brown	B-2		Belt tension sensor (Vehicles after V.I.N. 733001)

