


# Electrical Component Location

## 4. Electrical Component Location

### A: LOCATION

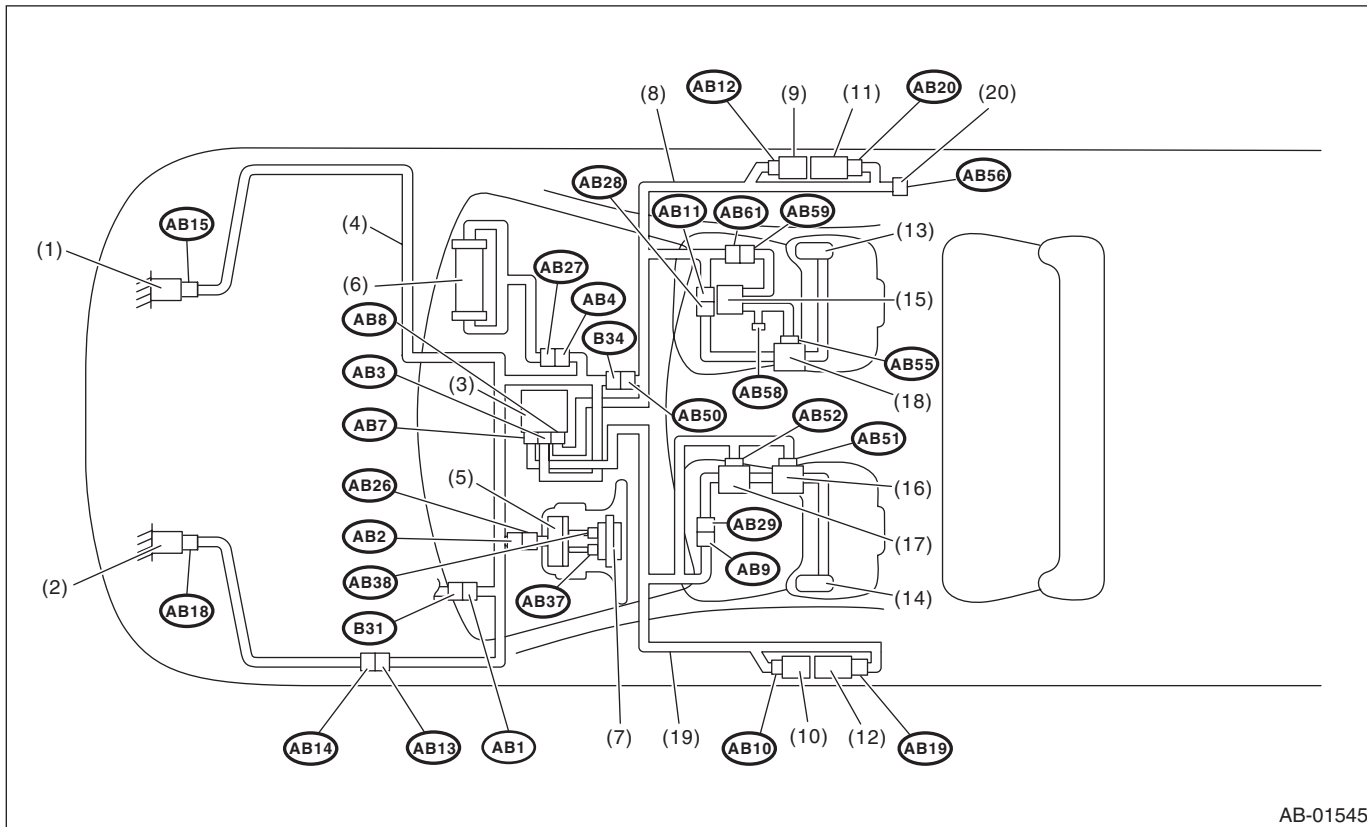

AB-01545

- |  |                                  |  |
|--|----------------------------------|--|
| (1) Front sub sensor (RH)  | (8) Airbag rear harness (RH)     | (15) Occupant detection control module |
| (2) Front sub sensor (LH)  | (9) Side airbag sensor (RH)      | (16) Buckle switch (LH)                |
| (3) Airbag control module with built-in safing and electric sensor | (10) Side airbag sensor (LH)     | (17) Seat position sensor (LH)         |
| (4) Airbag main harness  | (11) Seat belt pretensioner (RH) | (18) Buckle switch (RH)                |
| (5) Roll connector   | (12) Seat belt pretensioner (LH) | (19) Airbag rear harness (LH)          |
| (6) Passenger's airbag inflator                                    | (13) Side airbag inflator (RH)   | (20) Belt tension sensor (RH)          |
| (7) Driver's airbag inflator                                       | (14) Side airbag inflator (LH)   |  |

Connector No.	(AB1)	(AB2)	(AB3)	(AB4)	(AB7)	(AB8)	(AB9)	(AB10)	(AB11)	(AB12)	(AB13)	(AB14)
Pin	8	4	28	4	12	12	2	4	2	4	2	2
Color	White	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow
Male/Female	Male	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Male
Connector No.	(AB15)	(AB18)	(AB19)	(AB20)	(AB26)	(AB27)	(AB28)	(AB29)	(AB37)	(AB38)	(AB50)	(AB51)
Pin	2	2	2	2	4	4	2	2	2	2	2	2
Color	Yellow	Yellow	Black	Black	Yellow	Yellow	Yellow	Yellow	Orange	Black	Yellow	Yellow
Male/Female	Female	Female	Female	Female	Male	Male	Male	Male	Female	Female	Male	Female
Connector No.	(AB52)	(AB55)	(AB56)	(AB58)	(AB59)	(AB61)						
Pin	2	2	3	3	6	6						
Color	Yellow	Black	Brown	Gray	Gray	Gray						
Male/Female	Female	Female	Female	Female	Male	Female						