## 8. Rear Speaker


## A: REMOVAL

1) Disconnect the ground cable from the battery.

2) Remove the rear door trim. <Ref. to EI-35, RE-

MOVAL, Rear Door Trim.>

3) Remove the rear speaker mounting screws.

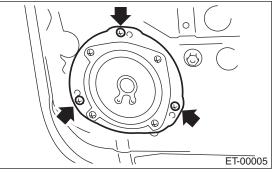

4) Disconnect the harness connector and remove the rear speaker.

## **B: INSTALLATION**

Install in the reverse order of removal.