


## 20.Sun Visor

### A: REMOVAL

Remove the mounting screws and detach the sun visor (A) and hook (B).

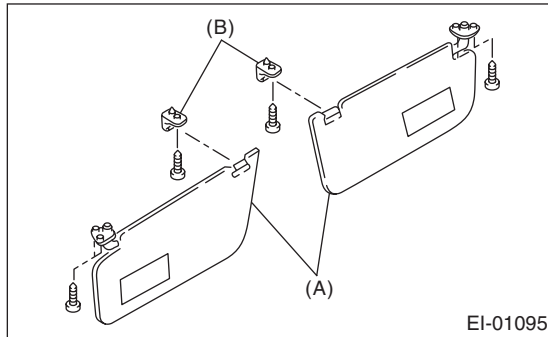

### B: INSTALLATION

Install in the reverse order of removal.