


## 24. Luggage Floor Mat

### A: REMOVAL

- 1) Remove the backside mat from the rear seat backrest.
- 2) Remove the clips, then detach the rear floor mats and boxes.

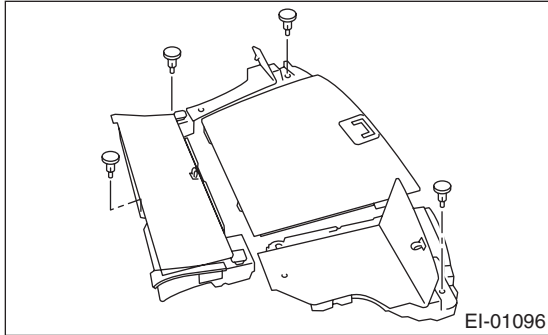

### B: INSTALLATION

Install in the reverse order of removal.