2. Power Window System

A: WIRING DIAGRAM

1. POWER WINDOW

<Ref. to WI-129, WIRING DIAGRAM, Power Window System.>

B: INSPECTION

Symptom	Repair order
All power windows do not operate.	 Fuse (SBF-6) (F/B No. 18) Power window circuit breaker Power window relay Wiring harness
Particular window does not operate.	 Power window main switch Power window sub-switch Power window motor Wiring harness
"Window Lock" does not operate.	Power window main switch