

# Front Turn Signal Light Bulb


## LIGHTING SYSTEM

---


### 11. Front Turn Signal Light Bulb

#### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the three clips holding the mud guard.

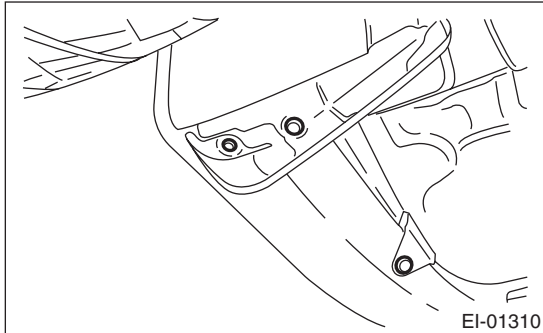

- 3) Turn over the mud guard and turn the socket and then remove the bulb.

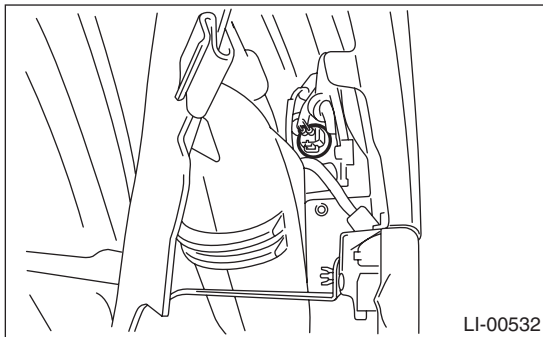

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.  
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.